

## **Suggested steps for customizing the background of the PowerSeries/PowerSeries NEO/PowerSeries PRO Touchscreens**

How to design your logo:

- Save the company logo locally in jpeg format.
- Using a photo-editing computer software. (steps below are specific to Paint)
- Select Image tab → Attributes, resize the canvas to 800 x 480.
- Uncheck maintain aspect ratio and click pixels.
- Select Edit tab → Paste From → select company logo in jpg format.
- Suggest the company logo be placed in the bottom left corner for best viewing during the home screen. See attached for example file.
- Save file as jpg/jpeg on SD card.

To change the home page view:

- Options
- User functions
- Keypad Config
- Home Page
- Contemporary
- To exit, press Back out
- Display options
- Brightness slide all the way to right
- Blank mode all the way to left

To insert logo into background:

- Insert the SD card into the PTK5507/HS2TCHP/HS2TCHPRO
- From the PTK5507/HS2TCHP/HS2TCHPRO Home page
- Select Options
- Installer Menu
- Keypad Programming
- Background Image
- Select picture from SD card
- Press the home key to exit