

## Application Notes

### 1.14 Hardwired Zones (PC1616/1832/1864 V4.2)

#### Panels:

POWER SERIES (PC1616/1832/1864 V4.2)

#### Overview:

Programming zones is a three-step process:

- Programming the zone definitions
- Programming the zone attributes (*Optional*)
- Add additional zones to the system

#### Program Sections:

Section [001] – [004]	Zone Definitions
Section [101] – [164]	Zone Attributes ( <i>Optional</i> )
Section [202] – [265]	Partition Zone Assignment – Zones 1 to 64

#### Step 1 – Programming Zone Definitions

Zones must be defined before they will operate. On the POWER SERIES, 39 different zone definitions are available. Enter the correct section and program the 2-digit number corresponding to the required zone definition.

Section [001]	– Zones 1 to 16
Section [002]	– Zones 17 to 32
Section [003]	– Zones 33 to 48
Section [004]	– Zones 49 to 64

#### Step 2 – Programming Zone Attributes (*Optional*)

Zone attributes are used to customize the operation of each zone. There are 64 sections available, Section [101] for zone 1 to Section [164] for zone 64. Each Section has 9 toggle options. Turn the appropriate option ON or OFF depending on the required operation.

Option [1]	– Zone audible/silent
Option [2]	– Steady bell output/pulsing bell output
Option [3]	– Door chime enable/disable
Option [4]	– Manual bypass enable/disable
Option [5]	– Force arm enable/disable
Option [6]	– Swinger shutdown enable/disable
Option [7]	– Transmission delay enable/disable
Option [8]	– Wireless zone enable/disable
Option [9]	– Cross Zone enable/disable
Option [14]	– NC Zone Wiring loop
Option [15]	– EOL Zone Wiring loop
Option [16]	– DEOL Zone Wiring loop

**Note:** Options 14, 15, 16 apply to first 8 zones only. If more than one of these options are enabled then lowest numbered option is enabled. E.g., If Option 14 and option 15 are enabled then the zones are configured as normally closed loops.

**Note:** The zone attributes for the zone will reset to the default settings if the zone definition is changed. A chart of the default settings for each zone definition is available in the Programming Worksheets.

### Step 3 – Partition Zone Assignment

Zones will not function until they are enabled. Enable all zones being used by turning ON the appropriate option in Section [202] to [265].

Section [202] – [209]	Partition 1 zones 1 to 64 enable/disable
Section [210] – [217]	Partition 2 zones 1 to 64 enable/disable
Section [218] – [225]	Partition 3 zones 1 to 64 enable/disable
Section [226] – [233]	Partition 4 zones 1 to 64 enable/disable
Section [234] – [241]	Partition 5 zones 1 to 64 enable/disable
Section [242] – [249]	Partition 6 zones 1 to 64 enable/disable
Section [250] – [257]	Partition 7 zones 1 to 64 enable/disable
Section [258] – [265]	Partition 8 zones 1 to 64 enable/disable

**Note:** If zones are assigned to additional partitions, ensure the partitions are enabled in Section [201].

#### Technical Tips:

1. The zone attributes for the zone will reset to the default settings if the zone definition is changed. For this reason always program zone definitions before programming zone attributes.
2. Only zones 1 to 8 are enabled at default. If additional zones are being used, they must be enabled before they will function.

#### Quick Test:

After all programming is complete, violate each zone and ensure each is displayed on the keypad. Arm the system in both the Stay and Away mode to ensure all zones are functioning properly.