


# Mounting Instructions

For PC5921, PC5921EXT and PC5921EXT/R

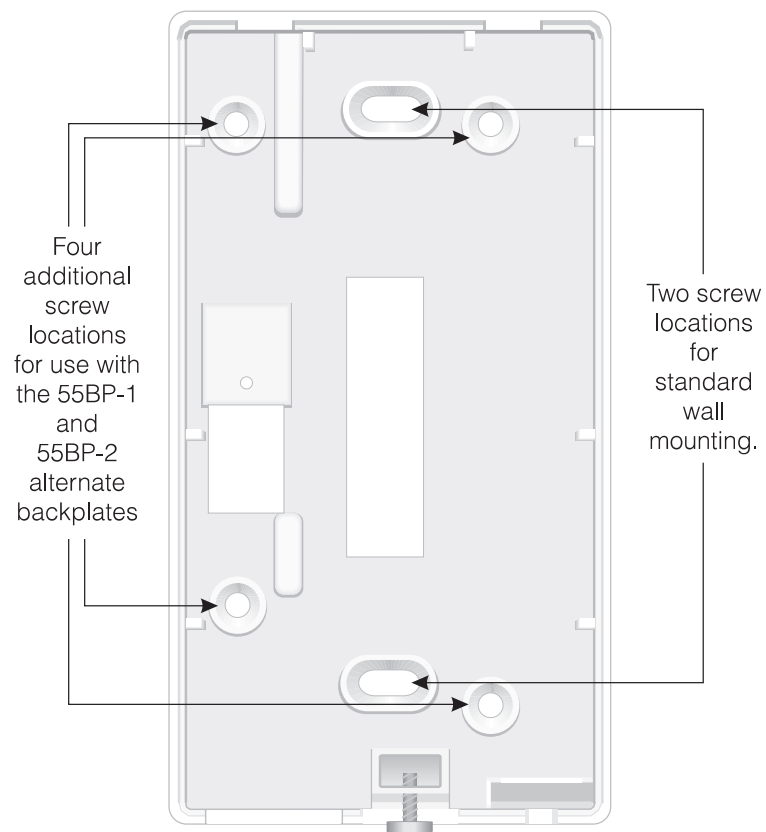

**Ensure proper orientation of backplate.**


The screw hole faces towards the floor.

## Directions:

- 1 Locate the desired placement of the unit.
- 2 Place the backplate against the wall and mark the desired screw locations.
- 3 We suggest that wall anchors be used for all screw locations. When the anchors have been placed, secure the backplate to the wall.
- 4 Secure the front to the backplate.

# Mounting Instructions

For PC5921, PC5921EXT and PC5921EXT/R

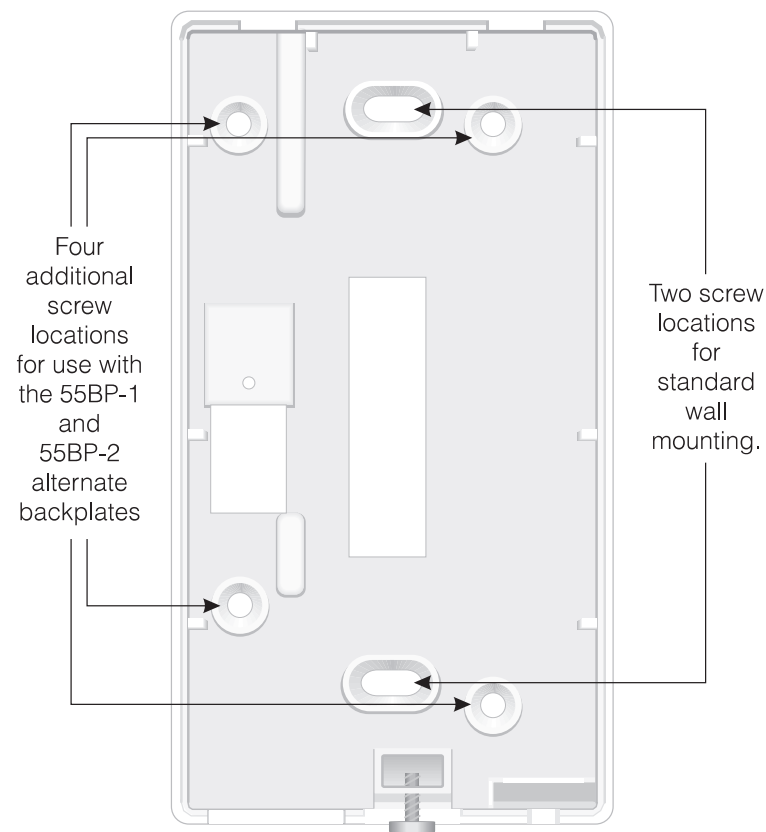

**Ensure proper orientation of backplate.**

The screw hole faces towards the floor.

## Directions:

- 1 Locate the desired placement of the unit.
- 2 Place the backplate against the wall and mark the desired screw locations.
- 3 We suggest that wall anchors be used for all screw locations. When the anchors have been placed, secure the backplate to the wall.
- 4 Secure the front to the backplate.



©1997, 2002 Digital Security Controls Ltd.  
Toronto, Canada • Tech. Line (800) 387-3630  
Printed in Canada 29002294 R0

## Mounting Instructions

**DSC®**  
**Power832**

S E C U R I T Y   S Y S T E M

PC5921  
PC5921EXT  
PC5921EXT/R



©1997, 2002 Digital Security Controls Ltd.  
Toronto, Canada • Tech. Line (800) 387-3630  
Printed in Canada 29002294 R0

## Mounting Instructions

**DSC®**  
**Power832**

S E C U R I T Y   S Y S T E M

PC5921  
PC5921EXT  
PC5921EXT/R