

PowerSeries – Reset Panel to Factory Default

Panels:

PC580 (Power432), PC1555 (Power632), PC5010 (Power832), PC5020 (Power864)

Overview:

Any PowerSeries panel can be defaulted, provided installer's lockout is not enabled. There are two ways to default the panel: a software default and a hardware default.

Factory Default Main Panel (Hardwire)

To factory default the main control panel perform the following:

- Step 1 – Remove AC and battery from the panel
- Step 2 – Remove all wires from the Zone 1 and PGM1 terminals
- Step 3 – With a piece of wire short the Zone 1 terminal to the PGM1 terminal
- Step 4 – Apply AC power to the main panel
- Step 5 – Zone light 1 will turn ON when the default is complete (approx. 30 seconds)
- Step 6 – Remove AC power from the panel
- Step 7 – Reconnect all original wiring and power up the control panel normally

Note: Only the main panel will default. All modules will not be affected.

Factory Default Main Panel (Software)

To factory default the main control panel perform the following:

- | | |
|----------------------------------|-------------------------------|
| Enter [*] [8] [Installer's Code] | Enter Installer's Programming |
| Enter [999] | Default Section |
| Enter [Installer's Code] | |
| Enter [999] again | Perform Factory Default |

The panel will take a few seconds to perform the default. When the keypad is again operational the default is complete.

Note: Only the main panel will default. All modules will not be affected.