

LE4010 Service Mode Instructions

Information for maintenance testing of the FACP and signal receiving centre transmitter

- Inform SRC personnel that maintenance testing is being conducted
- Place communicator in service mode by removing the front cover
- All events received from FACP are transmitted to SRC
- When testing is completed, close the cover using the four screws
- Inform SRC personnel that maintenance has been completed
- Ensure the product is functional at the end of the testing and all inputs are restored

