


PC5964 Audio Station Mounting Instructions

This instruction sheet shall be used in conjunction with the associated Audio Module Installation Manual.


Mounting Instructions

1. If required, remove the front cover from the backplate as follows:
 - a. Insert a small slotted screw driver in one of the slots indicated in Fig 1.
 - b. Gently pry the cover from the backplate.
 - c. Repeat this operation on the remaining slot. Lift cover free of backplate.

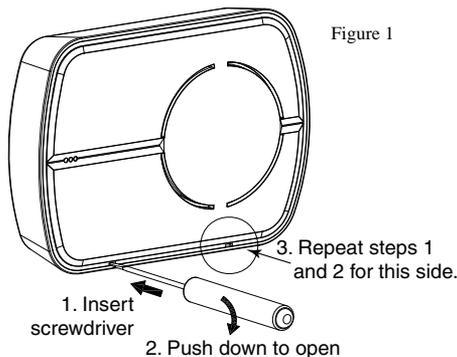

2. Determine the desired location and mounting method (A, B, C or D surface-mount)
3. (a) For A, B or C (Fig. 2) mounting methods, position the backplate over the electrical box ensuring free access to wiring. Then mark the screw locations indicated for the chosen mounting method.
(b) For D mounting (surface mount) remove the wiring access flange on the side of the backplate. Position the backplate in the desired location then mark the screw locations at the 4 corners of the backplate.

CAUTION!: DSC recommends the use of wall anchors when mounting directly onto a wall.

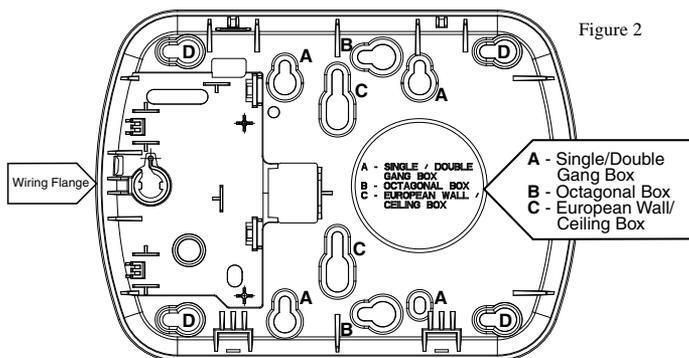

4. Route wiring as required.
5. Secure backplate to wall using the appropriate hardware.
6. Wire unit in accordance with the associated Audio Module instructions.
7. Place front cover over backplate. Gently press until cover locks in place with an audible click.
8. Power up system then verify operation.

DSC

©2007 Digital Security Controls, Toronto, Canada
www.dsc.com • 1-800-387-3630 (Canada, US), 905-760-3036
Printed in Canada

CE




29007411R002

PC5964 Audio Station Mounting Instructions

This instruction sheet shall be used in conjunction with the associated Audio Module Installation Manual.


Mounting Instructions

1. If required, remove the front cover from the backplate as follows:
 - a. Insert a small slotted screw driver in one of the slots indicated in Fig 1.
 - b. Gently pry the cover from the backplate.
 - c. Repeat this operation on the remaining slot. Lift cover free of backplate.

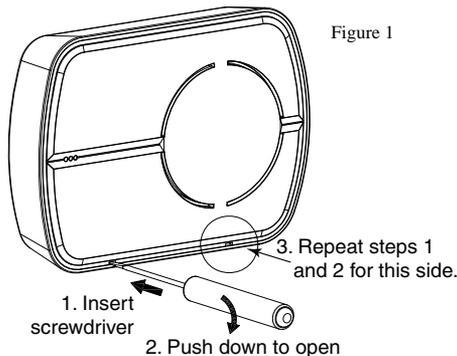

2. Determine the desired location and mounting method (A, B, C or D surface-mount)
3. (a) For A, B or C (Fig. 2) mounting methods, position the backplate over the electrical box ensuring free access to wiring. Then mark the screw locations indicated for the chosen mounting method.
(b) For D mounting (surface mount) remove the wiring access flange on the side of the backplate. Position the backplate in the desired location then mark the screw locations at the 4 corners of the backplate.

CAUTION!: DSC recommends the use of wall anchors when mounting directly onto a wall.

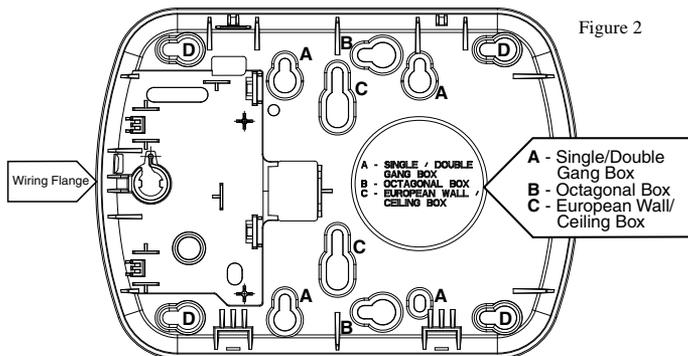

4. Route wiring as required.
5. Secure backplate to wall using the appropriate hardware.
6. Wire unit in accordance with the associated Audio Module instructions.
7. Place front cover over backplate. Gently press until cover locks in place with an audible click.
8. Power up system then verify operation.

DSC

©2007 Digital Security Controls, Toronto, Canada
www.dsc.com • 1-800-387-3630 (Canada, US), 905-760-3036
Printed in Canada

CE



29007411R002