

IR Remote Operation Instructions

The Communiqué IR Remote can be used to operate any Communiqué telephone connected to the Communiqué telephone system.

The IR remote must be pointed at the telephone you wish to operate. Given battery strength and the room environment, you should be able to operate the telephone with the IR remote from 12-15 feet away (3.5-4.5m).

The IR remote can only operate one Communiqué telephone at a time.

Answering an Incoming Call

When the telephone is ringing, point the remote towards the nearest Communiqué telephone and press the **HF** key. The call will be heard through the Communiqué telephone's handsfree speaker. To terminate the connection, press the **HF** key.

To Call Another Station

To call another internal station, press the **Int./Fl.** key. Listen for an internal dial tone through the handsfree speaker. Enter the station number. For example, for Station 12, press **Int./Fl.** and then enter [1][2].

To Call an Outside Number

To call an outside number, press the **HF** key. This will select the station's Prime Line. To select another line, press the **Int./Fl.** key, followed by [8][1] to [8][8] for lines 1-8. When you hear an external dial tone, enter the telephone number on the remote number pad.

Holding Calls


To place an outside call on hold, press the **Hold** key followed by the **HF** key. To retrieve a call from hold, press the **Int./Fl.** for internal dial tone. With internal dial tone present, press **[*] [8]** followed by the line number of the call on hold (1-8).

Accessing the Message Center

To retrieve mailbox messages, press the **Int./Fl.** key and listen for internal dial tone. With internal dial tone present, press the **MC** key. The Communiqué will now prompt you to enter a mailbox number and a PIN number (if required). Follow the voice prompts announced over the Handsfree speaker. To select a new mailbox, press [6].

Other telephone functions are available using the IR remote. Each is listed in the chart below:

Key	Feature	Instruction
DND/DO	Do Not Disturb	Press this key to turn the Do not Disturb mode on or off for the selected Communiqué telephone.
	Door Open	When connected to a door station, press this key to activate the electronic door strike (if installed).
Redial	Redial	From the idle state, press this key to redial the last number dialed from that telephone station.
	Auto-Redial	When a busy signal is heard, press this key to continue dialing that number until it is no longer busy.

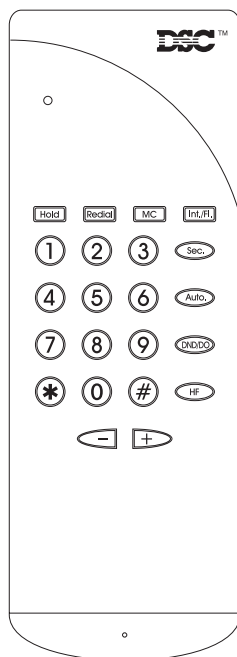

Key	Feature	Instruction
Int./Fl.	All Page	From the idle state, press this key to initiate an All Page.
Hold	Background Music	From the idle state, press this key to turn background music on or off.
[-] [+]	Volume	Use these keys to adjust the volume of the Handsfree speaker.
1	Backlighting	Press this key to adjust the backlighting of the keys on the telephone.
3	Key Intensity	Press this key to adjust the intensity of the lit red keys on the telephone.
Sec.	Security	From the idle state, press this key to access your security system, if installed.
Auto.	Automation	From the idle state, press this key to access your home automation features, if installed.
*	Tone Switch	To switch between pulse and tone dialing, press this key.

For more information on any of the features listed above, consult your Communiqué Operation Manual.

LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defect in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product. In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

WARNING: Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Products Ltd. could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

Digital Security Products Ltd. 160 Washburn St., Lockport, NY 14094



©1997 Digital Security Controls Ltd.

1645 Flint Road, Downsview, Ontario, Canada M3J 2J6

(416) 665-8460 • 1-800-387-3630

Printed in Canada 29002765 R0