

PowerSeries – Automatic Contact ID

Panels:

PC5020 (Power864)

Overview:

The Power864 can generate automatic Contact ID reporting codes for central station communication.

Programming automatic Contact ID is a seven-step process:

- Program the central station phone number
- Program the system account number
- Program the partition account numbers
- Program the communicator format
- Program the communicator call direction options
- Enable automatic Contact ID
- Program the reporting codes

Program Sections:

Section [301]	Phone Number 1
Section [310]	System Account Number
Section [311] – [318]	Partition Account Number
Section [350]	Communicator Format Option
Section [351] – [376]	Communicator Call Direction Options
Section [381]	Second Communicator Option Code
Section [320] – [349]	Reporting Codes

Step 1 – Program the Telephone Number

Program the central station phone number in Section [301].

Step 2 – Program the System Account Number

Program the system account number in Section [310].

Note: Program a HEX digit [A] for any digit '0' in the account number.

Step 3 – Program the Partition Account Numbers

Program the partition 1 to 8 account number in Section [311] – [318].

Note: Program a HEX digit [A] for any digit '0' in the account number.

Step 4 – Program the Communication Format

Program data [03] in Section [350] for telephone number 1.

Step 5 – Program the Communicator Call Direction Options

Communicator Call Direction options are used to determine which events will be reported to which phone number. By default option [1] is ON in all Sections and all events will transmit using phone number 1. To disable the reporting of a group of codes (i.e. openings and closings) turn option [1] OFF in the correct Section.

Section [351] – [358]	Alarm/Restoral for Partitions 1 - 8
Section [359] – [366]	Tamper Alarm/Restoral for Partitions 1 - 8
Section [367] – [374]	Opening/Closing for Partitions 1 - 8
Section [375]	Maintenance Alarms/Restorals
Section [376]	Test Transmission

Step 6 – Enable Automatic Contact ID

To enable automatic Contact ID turn Option [7] OFF in Section [381].

Step 7 – Program the Reporting Codes

The panel will automatically transmit the correct Contact ID reporting code for all events if the reporting code for the event is anything other than data [00]. By default, all reporting codes are programmed as data [FF], which means the panel will report all possible events. It is important to disable the reporting of unwanted events by programming data [00] for those events.

Section [320] – [349]	Reporting Codes
-----------------------	-----------------

Technical Tips:

1. If the account number has a [0] in it, program a HEX digit [A] – press [*][1][*].
2. Disable the reporting of any event by programming the reporting code as data [00].
3. To disable groups of reporting codes (i.e. openings and closings) use the Call Direction option Sections.
4. The Power 832 does not support automatic Contact ID reporting.

Quick Test Procedure:

Press and hold the Auxiliary keys [A]. Upon successful transmission of the signal to the central station, the keypad will beep rapidly 10 times.