

PowerSeries – Keypad Buzzer

Panels:

PC580 (Power432), PC1555MX (Power632), PC5010 (Power832), PC5020 (Power864)

Overview:

The keypad buzzer tone on all PowerSeries keypads can be changed individually. The keypad buzzer can also be disabled in this manner.

Program Sections:

None.

LED Keypads - PC5508Z, PC5516Z, PC5532Z, LCD5501Z

To change the keypad buzzer tone, press and hold the [*] key when in the ready mode. The keypad will beep, changing the tone up or down as long as the button is pressed. When the desired tone is heard, release the [*] key.

LCD5500(Z) Keypads

To change the Buzzer on the LCD keypad, perform the following:

1. Enter [*][6][Master Code].
2. Scroll to 'Buzzer Control', then press the [*] key to select it
3. Use the arrow keys (<>) to scroll to the desired tone.
4. Press [#] to exit.