



VPM5580TC
Installation Manual
Version 2.0



• **W A R N I N G** •

This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.

WARNING Please Read Carefully

System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, however, involving fire, burglary, or other types of emergencies where it may not provide protection. Any alarm system of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some but not all of these reasons may be:

■ Inadequate Installation

A security system must be installed properly in order to provide adequate protection. Every installation should be evaluated by a security professional to ensure that all access points and areas are covered. Locks and latches on windows and doors must be secure and operate as intended. Windows, doors, walls, ceilings and other building materials must be of sufficient strength and construction to provide the level of protection expected. A reevaluation must be done during and after any construction activity. An evaluation by the fire and/or police department is highly recommended if this service is available.

■ Criminal Knowledge

This system contains security features which were known to be effective at the time of manufacture. It is possible for persons with criminal intent to develop techniques which reduce the effectiveness of these features. It is important that a security system be reviewed periodically to ensure that its features remain effective and that it be updated or replaced if it is found that it does not provide the protection expected.

■ Access by Intruders

Intruders may enter through an unprotected access point, circumvent a sensing device, evade detection by moving through an area of insufficient coverage, disconnect a warning device, or interfere with or prevent the proper operation of the system.

■ Power Failure

Control units, intrusion detectors, smoke detectors and many other security devices require an adequate power supply for proper operation. If a device operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a security system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

■ Failure of Replaceable Batteries

This system's wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

■ Compromise of Radio Frequency (Wireless) Devices

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

■ System Users

A user may not be able to operate a panic or emergency switch possibly due to permanent or temporary physical disability, inability to reach the device in time, or unfamiliarity with the correct operation. It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

■ Smoke Detectors

Smoke detectors that are a part of this system may not properly alert occupants of a fire for a number of reasons, some of which follow. The smoke detectors may have been improperly installed or positioned. Smoke may not be able to reach the smoke detectors, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors. Smoke detectors may not detect smoke from fires on another level of the residence or building.

Every fire is different in the amount of smoke produced and the rate of burning. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

■ Motion Detectors

Motion detectors can only detect motion within the designated areas as shown in their respective installation instructions. They cannot discriminate between intruders and intended occupants. Motion detectors do not provide volumetric area protection. They have multiple beams of detection and motion can only be detected in unobstructed areas covered by these beams. They cannot detect motion which occurs behind walls, ceilings, floor, closed doors, glass partitions, glass doors or windows. Any type of tampering whether intentional or unintentional such as masking, painting, or spraying of any material on the lenses, mirrors, windows or any other part of the detection system will impair its proper operation.

Passive infrared motion detectors operate by sensing changes in temperature. However their effectiveness can be reduced when the ambient temperature rises near or above body temperature or if there are intentional or unintentional sources of heat in or near the detection area. Some of these heat sources could be heaters, radiators, stoves, barbecues, fireplaces, sunlight, steam vents, lighting and so on.

■ Warning Devices

Warning devices such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If warning devices are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible warning devices may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible warning devices, however loud, may not be heard by a hearing-impaired person.

■ Telephone Lines

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also an intruder may cut the telephone line or defeat its operation by more sophisticated means which may be difficult to detect.

■ Insufficient Time

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time to protect the occupants or their belongings.

■ Component Failure

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

■ Inadequate Testing

Most problems that would prevent an alarm system from operating as intended can be found by regular testing and maintenance. The complete system should be tested weekly and immediately after a break-in, an attempted break-in, a fire, a storm, an earthquake, an accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

■ Security and Insurance

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

Table of Contents

System Introduction	4
1.1 Specifications	4
1.2 About this Manual	4
Getting Started	5
2.1 Installation Steps	5
2.2 Keybus Wiring	6
2.3 Confirming Supervision of the VPM5580TC Module	6
2.4 Connecting the PL-513 or PSC04 Controller	6
2.5 Connecting the EMS Thermostat and Additional Sensors	7
How to Program	8
3.1 Entering Installer Programming	8
3.2 Programming Data Entry Sections	8
3.3 Programming Toggle Option Sections	9
3.4 Programming Label Entry Sections	9
3.5 Reviewing Programming	10
3.6 Exiting Programming	10
VPM5580TC Access Programming	11
4.1 Accessing the VPM5580TC Locally	11
4.2 Accessing the VPM5580TC Remotely	11
4.3 Global or Partition Operation	11
5.1 Programming VPM5580TC Prompts	12
General VPM5580TC Programming	12
5.2 Changing Local Programming Lockout	12
Automation Item Programming	13
6.1 Enabling Home Automation	13
6.2 Programming Automation Item Operation	13
6.3 Programming How Automation Items are Activated	14
6.4 Programming the House Code & Unit Number	15
6.5 Programming Automation Item Options	15
6.6 Assigning Automation Items to Schedules	16
6.7 Assigning Automation Items to Modes	16
6.8 Assigning Automation Items to PGM Outputs	17
6.9 Programming Automation Items to Follow Zones	18
Automation Schedule Programming	19
7.1 Programming Schedules	19
Mode Programming	20
8.1 Automation Items and Modes	20
8.2 Thermostat Occupancy Settings and Modes	20
8.3 Programming Modes to Follow PGM Outputs	21

Temperature Control Programming	22
9.1 How Temperature Control Works	22
9.2 Programming Temperature Control Operation	23
9.3 Selecting an Address for a Thermostat	23
9.4 Programming How Occupancy Settings Are Turned On	23
9.5 Selecting Thermostat Options	24
9.6 Assigning Schedules for Temperature Control	25
9.7 Assigning Occupancy Settings to Modes	25
9.8 Assigning Occupancy Settings to PGM Outputs	26
Emergency Keys (Fire, Auxiliary Panic)	27
Programming Worksheets	28
System Programming	28
Schedule Programming	30
Automation Items	31
Automation Item Zone Follower Assignments	37
Assigning Modes to Follow PGM Outputs	40
Automation Item Pulse Timers	41
Automation Item Output Follower	42
Label Programming (Please see Appendix A for a list of available words.)	43
Thermostat Control Programming	46
Thermostat Labels	49
Special Programming	49
Appendix A: VPM5580TC Label Library	50
Appendix B: Automation Item House Codes and Unit Number	51
Appendix C: Automation Menu Commands	52
Appendix D: [*][6] Options	53
Appendix E: Access Code Programming	54
Appendix F: Glossary	55

Thank you for purchasing the DSC VPM5580TC module. When connected to the main control panel, the module turns any Touch-Tone telephone – local or remote – into a fully functional keypad. Once activated, the VPM5580TC will act as a guide for the user. The VPM5580TC will prompt the user through clear, easy to understand sentences, telling them what the next key entry should be to perform the various functions available.*

In addition to an expanded library of over 250 system words, a powerful “say number” command has been added to the VPM5580TC. This new feature allows any number between zero and 999 to be said in three different ways. Up to six words can be used for Zone Labels, Automation Items, Automation Modes and System Labels, thereby enhancing the VPM5580TC’s versatility.

A new feature on the VPM5580TC is built-in temperature control for furnaces and air conditioners. This feature allows the VPM5580TC to control up to four EMS thermostats. Each thermostat has four programmable temperature ranges called occupancy settings. Each occupancy setting can be turned on by the user, or by the VPM5580TC with schedules, panel events and/or modes.

The module also has a built-in line carrier interface. This feature allows the module to control up to 32 line carrier Automation type items for lighting control, other home Automation features. Automation items can be turned on by the user, or by the VPM5580TC with schedules, panel events and/or modes. A full range of dimming levels are also available for lighting control.

We are confident that you and your customer will discover that the VPM5580TC module is the most useful alarm control panel enhancement product available on the market today.

We welcome your input. Please send your comments to:

*Digital Security Controls
c/o VPM5580TC Product Manager
3301 Langstaff Road
Concord, Ontario
L4K-4L2*

* Touch-Tone is a trademark of Stentor Resource Centre Inc.

System Introduction

S E C T I O N 1

1.1 Specifications

Voice Prompting

- All prompts are in complete sentences using a pleasant, easy to understand female voice
- Panel status is constantly announced, when applicable, including bypass, trouble, alarm memory and zone status

Library

- 250+ system words
- 240+ words for programming labels
- Powerful 'say number' command can announce any number from 0 through 999 in three ways

Programmable Labels

- System Zone Labels
- Automation Item Labels
- Mode Labels
- Miscellaneous System Labels
- System Partition Labels
- Thermostat Labels

Automation Control

- Requires the connection of the PL-513 or PSC04 X-10 controller module
- Control up to 32 X-10 Automation Items
- Full range of dimming for lighting control
- Global ON/OFF command

Temperature Control

- Available with the following control panels only: PC5010 v2.x, PC5015 v2.x, PC5008 v2.x
- Requires at least one EMS thermostat
- Connect and control up to four thermostats
- Each thermostat has four sets of temperature ranges: Day Occupancy Setting, Night Occupancy Setting, Auxiliary Occupancy Setting, Away Occupancy Setting
- Up to six EMS-ITS modules (indoor sensors) can be connected to each thermostat for temperature averaging
- One EMS-OTS module (outdoor sensor) can be connected to each thermostat to detect and display the outdoor temperature

Note: Does not support heat pump applications.

Additional Features

- Manual control of Automation Items and temperature
- 16 schedules with ON Time, OFF Time and Day of Week Mask
- 8 user-controlled modes
- Event-activated control of Automation Items and temperature for any PGM Output option supported by the main control panel

Downloading

- All VPM5580TC programming can be done via DLS-1 v6.5 or higher software, through the security control panel. Please refer to *Installation Manual* for the security control panel for details

1.2 About this Manual

In this manual, VPM5580TC voice messages are printed in bold and are enclosed in quotes, as shown here:

"Enter your access code"

You can program labels for the VPM5580TC to announce when it refers to things such as zones and partitions (e.g. "East wing" instead of "Partition 2"). Some sections give examples of programmed labels. These examples are enclosed in brace brackets, as shown here:

"Program the VPM5580TC to announce an appropriate label, such as {Holiday Mode} for mode 01. "

When instructed to press a key or keys, symbols for the keys will be enclosed in square brackets, as shown here:

Enter [★]

Getting Started

SECTION 2


The following steps are provided to assist with the installation of the VPM5580TC module. If you are unfamiliar with the VPM5580TC module it is suggested you follow these steps in order to help prevent problems and reduce the overall installation time.

2.1 Installation Steps

Step 1: Mount the VPM5580TC

To connect the VPM5580TC to the main CPU board, perform the following steps:

1. Remove the nuts from the two threaded studs at the bottom corners of the VPM5580TC section of the control unit.
2. Fasten the two standoffs provided with the interface card to the threaded studs, as shown below.
3. Line up the female connector on the interface card with the male connector labelled VPM on the control unit and firmly press into place.
4. Fasten the two screws provided with the interface card to the standoffs to secure the card in place.

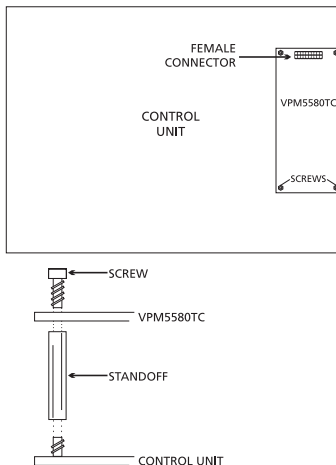

Note: The main control panel should remain powered down until the Communicé is powered up and all stations have been initialized.

Note: Permanent damage could result to the VPM5580TC or the control panel if the connections are offset. You must ensure that proper connections are made before applying power to the control unit.

Step 2: Connect the Keybus (Section 2.2)

Connect the 4 wire Keybus in accordance to the diagram in Section 2.2 “Keybus Wiring”.

Step 3: Enroll the VPM5580TC Module (Section 2.3)

Enroll the VPM5580TC module in accordance to the guideline provided in Section 2.3 “Enrolling the VPM5580TC module”.

Step 4: Connect the PL-513 or PSC04 Controller (Section 2.4)

If the installation also includes Automation items connect the PL-513 or PSC04 Controller in accordance to the diagram provided in Section 2.4 “Connecting the PL-513 or PSC04 Controller”.

Step 5: Connect the EMS-100 Thermostat and Temperature Sensors (Section 2.5)

If you will be adding temperature control to the system, connect one or more EMS thermostats to the VPM5580TC according to FIGURE 3. Refer to FIGURE 4 if you will be connecting additional sensors.

Step 6: Program the VPM5580TC

All parameters of the VPM5580TC can be programmed via any local touch tone telephone. Follow the guideline provided in Section 4 “How to Program”.

Step 7: Test the System

Test the VPM5580TC using both local and remote telephones to ensure both operate properly. Check all programmed labels and the operation of all functions including Automation items and thermostats, if connected.




Temperature control will work only on control panels that support Escort 5580 models and software version of 2.X or higher. Does not support heat pump applications.

2.2 Keybus Wiring

The VPM5580TC module has 4 terminals marked Keybus (red, black, yellow and green). Connect these four terminals to the 4 terminals on the main control panel marked Keybus (red, black, yellow and green).

Keybus Connection

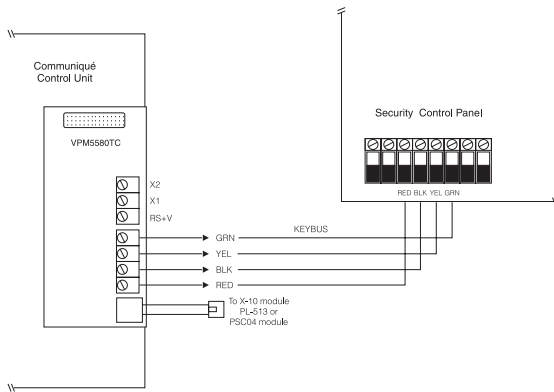

If the Keybus is not wired correctly the VPM5580TC will not operate properly.

2.3 Confirming Supervision of the VPM5580TC Module

The VPM5580TC will function properly as soon as all wiring is complete and power is applied. However, to confirm that the security control panel is supervising the VPM5580TC, you should follow these steps:

1. Wire the VPM5580TC module to the Keybus.
2. The panel will automatically search for all modules on the system. The search takes approximately 1 minute. From this point on, if any modules are removed from the system, a Supervisory Trouble will be generated.

3. To confirm supervision, enter Installer's Programming ([*][8][Installer's Code]), and then enter section [903]. On LED keypads, light 24 ON represents successful VPM5580TC supervision. On LCD keypads, the description "Escort5580" will be displayed if successful.
4. If this is not successful, check all wiring to the VPM5580TC.

2.4 Connecting the PL-513 or PSC04 Controller


The RJ-11X telephone jack on the VPM5580TC is for connecting the PL-513 or PSC04 Controller. Use an RJ-11X connector cable to connect the VPM5580TC to the PL-513 or PSC04. Plug the PL-513 or PSC04 Controller module into any unswitched AC outlet. Connect Automation items for lighting, outlet and temperature control. These items plug into AC outlets located throughout the installation.

The PL-513 or PSC04 Controller receives commands from the VPM5580TC module and sends out signals to control the various Automation items connected.

The following diagram shows the cable currently required for connecting the VPM5580TC to the PL-513 or PSC04. With the jacks side by side (tabs facing up), the colours of the wire in each jack will appear in the same order from left to right. This cable is called a "Straight Through Cable" as per telephone industry standards.



Do not use a "Swapped", "Flipped" or "Crossover" cable as it will not work with the VPM5580TC. To verify whether you have the correct type of cable, plug in the PSC04 (PL513). The red LED should turn ON. Connect the telephone cable to both the PSC04 (PL513) and the VPM5580TC. If the LED on the PSC04 (PL513) turns OFF and remains unlit, you are using the wrong type of cable.

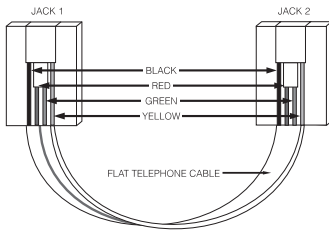

2.5 Connecting the EMS Thermostat and Additional Sensors

When connected to the VPM5580TC, an EMS Thermostat allows users to detect and control the indoor temperature of the premises locally or remotely from any touchtone telephone. The VPM5580TC can announce either temperature (exterior temperature only if an EMS-OTS module is attached and enabled). The LCD5500Z can also display the temperature(s) and allows the user to access temperature controls.

Figure 3 illustrates how the EMS thermostat connects to the VPM5580TC. Refer to the EMS thermostat Installation Sheet for more details.

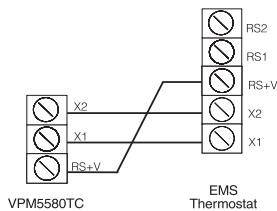


Figure 3: Connecting the VPM5580TC to an EMS thermostat.

Connecting Indoor Sensors (EMS-ITS)

The thermostat has its own temperature sensor built in. You can install additional indoor sensors for more accurate temperature control. Use EMS-ITS sensors to measure temperature at a remote location from the thermostat (where the thermostat's own sensor is disabled), or for temperature averaging in large rooms or between different rooms.

Up to 6 EMS-ITS sensors may be installed. Connect the sensors to the thermostat as shown in Figure 4.

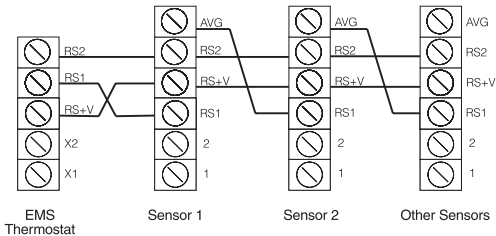


Figure 4: Connecting thermostat to additional sensors.

The maximum distance sensors may be installed from the thermostat is 90 m (300'). Refer to the EMS-ITS Installation Sheet for more details.

Connecting the EMS-OTS (Outdoor Sensor)

The EMS-OTS senses outdoor air temperature via an exterior wired probe. This temperature can be displayed on the thermostat but does not affect thermostat function.

Only one EMS-OTS module may be installed per thermostat. Connect the EMS-OTS to the thermostat in series the same way as an EMS-ITS module (see Figure 4). Insert the EMS-OTS at any point in a chain with other sensors. Refer to the EMS-OTS Installation Sheet for more details.

How to Program

S E C T I O N 3

The following sections describe how to program the VPM5580TC. All VPM5580TC programming can be done via any local touchtone telephone or via the DLS software through the security control panel.



It is extremely important that you read this section of the manual completely before attempting to program the VPM5580TC module.



When using the VPM5580TC module, do not turn on the Daylight Savings Time option in the control panel programming (if this option is present in the panel). This option will be controlled by the Communiqué system.

3.1 Entering Installer Programming

With the system disarmed:

1. From a Communiqué telephone, press the [SECURITY] key. If you are using a telephone connected to a Communiqué DAI station, press [7][3] (Security Functions). The system will announce ***“Hello”***.
2. Enter programming mode by pressing [★][8]. The system prompts:
“Enter the Service Code”
3. Enter the 4-digit Service code. The default service code is [5580]. (You can change the service code in programming section [001].) After the service code is entered, the system prompts:
“Enter a Section Number. To exit, press [#]”
4. To enter a programming section, enter the 3-digit number of the section. If you make an error entering the section number, the system prompts:
“Invalid entry. Enter a Section Number. To exit, press [#]”

When you enter a section number, the system announces the section you have entered with the prompt:

“Section (number)”



For programming changes to take effect, you must exit Installer's programming and close the connection with the VPM5580TC.

3.2 Programming Data Entry Sections

To program a data entry section from the VPM5580TC programming mode:

1. Enter the 3-digit section number.
2. The system announces the section you have entered with the prompt:

“Section (number)”

The system announces the data presently programmed in the programming section as:

“Data is (data)”

The system then prompts:

“Enter new data”

3. Enter the new data in the section, or return to the “Enter a Section Number” prompt, by pressing [#].

When you have finished entering the new data, the system announces the new data with the prompt:

“Data is (data)”

If you make an invalid data entry, the system announces:

“Invalid Entry. Data is (data). Enter new data. To exit, press pound.”

4. Record the new data in the appropriate section of the Programming Worksheets.

3.3 Programming Toggle Option Sections

To program a section with toggle options from the VPM5580TC programming mode:

1. Enter the 3-digit section number.
2. The system announces the section you have entered with the prompt:

“Section (number)”

The system announces which options are presently turned ON with one of the following prompts:

“All options are off”

“All options are on”

“Option (number) is on”

“Options (numbers) are on”

The system then prompts:

“Enter two digit option. To Exit, press pound”

3. To exit the section without making any changes, press [#].
To turn an option ON or OFF, enter the 2-digit option number.
If you enter an invalid option number, the system prompts:

“Invalid entry”

After you enter a valid option number, the system again announces which options are ON.

4. When you have finished programming the options in the section, press [#]. The system returns to the “Enter a Section Number” prompt.
5. Record your new programming choices in the appropriate section of the Programming Worksheets.

3.4 Programming Label Entry Sections

To program or change a label:

1. Enter the section number of the label. The system announces the section number and then recites the words presently programmed in the label. Each label may have up to six words. The system then prompts:

“Enter three digit word. To exit, press pound”

2. Enter the first word of the label using the 3-digit codes from the Label Library in Appendix B of the Programming Worksheets.
The system beeps at the end of each correctly entered code and the system prompts:

“Enter three digit word. To exit press pound”

If you make an invalid entry, the system prompts:

“Invalid entry. Enter three digit word. To exit press pound”

3. If you have more words to program, enter the 3-digit code of each word until you are finished.
4. When you have entered six words, the system will recite the label. If your label is less than six words, press [#].
5. To have the system read the new label to you, enter the programming section for the label again.
6. If the label is correct, press [#]. To change the label again, repeat steps 1-5, above.
7. Record the new label in the appropriate section of the Programming Worksheets.

Adding Numbers to Labels

Three special Number Commands are available to allow the system to include a number in the voice label. The number commands allow the system to announce the number in three different modes:

Label 000: Number Command 1, Combined Form. The number will be announced in its full form. For example, the number 401 would be announced as ***“four hundred and one”***.

Label 001: Number Command 2, Ordered Form.
The number will be announced in a descriptive form. For example, the number 401 would be announced as *“four hundred and first”*.

Label 002: Number Command 3, Individual Numbers. Each digit in the number will be announced individually. For example, the number 401 would be announced as *“four zero one”*.

The number commands take up two of the six available word spaces in a label. In the first space select the type of announcement for the number (Number Command 000, 001 or 002). In the second space program the 3-digit number to be read (from 000 to 999).

!

Because number commands take up 2 label spaces, you cannot program them in the sixth entry spot for a label.

.....

Automation Item Labels ..	Sections [451] - [482]
Mode Labels	Sections [521] - [528]
Command Output Labels	Sections [545] - [548]
Partition Labels	Sections [561] - [562]
Zone Labels	Sections [601] - [633]
Thermostat Labels	Sections [884] - [887]

.....

3.5 Reviewing Programming

To review the current programming for a section enter the 3-digit section number. The VPM5580TC will announce the data programmed. If the programming is correct press [#] to exit the section, otherwise enter the correct data.

3.6 Exiting Programming

When the VPM5580TC announces *“Enter Section Number”*, press the [#] key.

VPM5580TC Access Programming

S E C T I O N 4

4.1 Accessing the VPM5580TC Locally

To access your security system from a Communiqué telephone:

1. Press the [SECURITY] key. If you are using a telephone connected to a Communiqué DAI station, press [7][3] (Security Functions). The system will announce ***"Hello"***.
2. If the Access Code Required for Security System Access option is enabled the system will announce ***"Enter Your Access Code"***. Access to the security system will not be granted until a valid access code has been entered.

NOTE: Invalid access codes do count towards Main Panel Keypad Lockout (see the "Keypad Lockout" section of your system Installation Manual.)

.....
Code Required for
Security Access Section [021]: [02]
.....

4.2 Accessing the VPM5580TC Remotely

If the Remote Access option is enabled the security system can be accessed remotely from any touch tone phone in the world (requires a Message Center Card to be installed on the Communiqué main panel). To access your security system remotely:

1. Call your telephone number and wait for the automated greeting.
2. During the greeting, press the [*] key along with a remote access code if required and the system will announce, ***"Enter a Feature Option"***.
3. Enter [7][3] for Security Functions and the system will announce, ***"Hello. Enter your access code or press [#] to return to remote access options"***.
4. Enter a valid access code. If the code is not entered within 10 seconds or if the incorrect user code is entered 3 times, the system will back the user up one step to the ***"Enter a Feature Option"*** prompt.

If everything is done correctly the VPM5580TC will begin to announce the status of the system.

.....
Local and Remote Access ... Section [021]: [01]
.....

4.3 Global or Partition Operation

If you are connecting the VPM5580TC to a system with 2 partitions, you can program the VPM5580TC to allow access to both partitions (global operation), or to only one partition.

Global Operation

If the security system has been set up with 2 partitions, enable the **Access Code Required for Security System Access** option. Enabling this option ensures that users can only access partitions they have permission for.

When a user accesses the VPM5580TC, it will automatically determine which partition(s) to select from the access code entered. (E.g. if the access code entered only works on partition 1, the VPM5580TC will allow access to partition 1 and begin to announce its status.)

If the access code entered has permission for both partitions, the VPM5580TC will prompt:

"To select {System}, press [1]."

"To select {Partition 2}, press [2]."

Once the user presses [1] or [2], the VPM5580TC will grant access to the selected partition and begin to announce its status.

If the partition is in Ready mode, the VPM5580TC will prompt either:

"To select {System}, press [#], then [1]."

or

"To select {Partition 2}, press [#], then [2]."

This allows the user to select the other partition if their access code has permission for both partitions.

Partition Operation

If you need to prevent all users from having local access to either of the partitions through the VPM5580TC, disable VPM5580TC access to that partition in section [002], options [01-02].



Do not disable access to both partitions.

.....
Partition Access Section [002]: [01-02]
.....

General VPM5580TC Programming

S E C T I O N 5

5.1 Programming VPM5580TC Prompts

The VPM5580TC is designed to make the security system easier for the user by reminding users of available commands. For example, after a user accesses the system, they can press [★] and the VPM5580TC will announce the [★] commands that are available.

Turn on only the prompts that apply to the system you are installing. This will help avoid confusion for the users. The options in section [004] only effect the VPM5580TC [★] prompts: if a prompt is disabled, users will still be able to enter the command it refers to.

Section [003] determines which Status prompts the user will hear. If an option is "ON", the system will announce the prompt when the appropriate condition is present. If an option is "OFF", the system will not announce the prompt if the condition is present.

Turn on applicable thermostat and temperature prompts in section [008]. Refer to the Programming Worksheets for a list of available prompts.

.....	
Status Prompt Mask	Section [003]
[★] Function Prompt Mask	Section [004]
Thermostat Prompt Mask	Section [008]
.....	

5.2 Changing Local Programming Lockout

The VPM5580TC can be programmed locally through any touchtone telephone. The **Local Programming Lockout Counter** determines the number of incorrect Service codes before local programming lockout occurs. If the number of incorrect Service codes are entered the VPM5580TC will lock out programming for the number of minutes programmed in **Local Programming Lockout Duration**. When locked out the VPM5580TC will not allow local programming for the duration even if the correct Service code is entered. Programming via the DLS can still be performed if local programming lockout is active.

.....	
Local Programming Lockout Counter	Section [005]
Local Programming Lockout Duration	Section [006]
Service Code	Section [001]
.....	

Automation Item Programming

S E C T I O N 6

Using the VPM5580TC, users can control up to 32 items such as lights, outlets and window blinds. The VPM5580TC controls Automation items (lights, outlets, blinds, etc.) through a PL-513 or PSC04 Controller module (see section 2.5 for connection information).

Read sections 6 to 8 carefully before programming Automation items. Please see section 9, "Temperature Control Programming" for information on how to program the VPM5580TC for temperature control.

6.1 Enabling Home Automation

For Automation items to work, enable the **Home Automation** feature in section [002], option [03]. You will also need to program each Automation item individually, as described in section 6.2, "Programming Automation Item Operation".

Users will be able to control Automation items through the Automation menu. For additional security, enable the **Automation requires an Access Code** option. If home Automation is enabled, when a user enters the Automation menu, the VPM5580TC will prompt:

"Enter Your Access Code"

If **No Access Code Required for Automation** is enabled, the VPM5580TC will immediately enter the Automation item control menu.

To control the Automation items, the PL-513 or PSC04 Controller transmits signals over the 50 or 60 Hz AC power of the premises. Choose either **50Hz or 60Hz** in section [002], option [05].

Program the **Number of Automation Item Transmissions** that the VPM5580TC will send when an Automation item is activated. Since Automation transmissions are not confirmed, having the VPM5580TC transmit multiple on/off commands to the control modules can increase reliability.



Each transmission takes approximately one second. The larger the number, the slower the Automation system will appear to operate.

The default setting is [001], one transmission. Valid entries are [001] to [255]. A setting of [003] will overcome most signal transmission difficulties.

.....
Home Automation Enable Section [002]: [03]
Automation Req. Access Code Section [002]: [04]
AC=50 or 60Hz Section [002]: [05]
Number of Automation Item
Transmissions Section [007]
.....

6.2 Programming Automation Item Operation

To tell the VPM5580TC how each Automation item should work, program the operation of each item to be installed in programming sections [130] through [289]. For each item, you need to program these sections:

- Program the home Automation item **House Code and Unit Number** (see section 6.4)
- **Enable** the Automation item and program various operating **options** (see section 6.5)
- Select which **schedules** (if any) the Automation item will follow (see section 6.6)
- Select which **modes** (if any) the Automation item will follow (see section 6.7)
- Select which **panel events (PGM outputs)** (if any) the Automation item will follow (see section 6.8).
- Select how the item will be activated and deactivated by programming an **output condition** for the Automation item (see section 6.3)

Programming sections [130] through [134] for Automation item 01 are described in detail in sections 6.3 to 6.7. Program Automation items 02 through 32 in the same manner.

In addition, you may need to program one or more of the following:

- The **On Time, Off Time and Days of the Week** of each schedule to be used (see section 7.1).

- **Zone Follower** options, if any Automation items will follow zones (see section 6.9).
- **Automation Item Pulse Timers**, if any Automation items will turn on for a short period of time when activated (see section 6.5, option (06)).
- **Automation Item Labels**, to program what the VPM5580TC will say when referring to an Automation item (see section 3.4).
- **Mode Labels**, to program what the VPM5580TC will say when referring to a mode (see section 3.4).

6.3 Programming How Automation Items are Activated

Automation items can be activated 6 ways.

- manually (Automation menu)
- globally (Automation menu)
- event initiated
- scheduled
- scheduled OR event initiated
- scheduled AND event initiated.

Manual User Control

Users can control the item through the Automation menu. (E.g. to allow manual control for item 1, turn ON section [131], option [02].) The item can still follow schedules or PGM output assignments, if programmed.

See section 6.5, *Programming Automation Item Options* for more information.

Global Item User Control

Users can control items included in the Global command through the Automation menu. (E.g. to include item 1 in the Global command, turn ON section [131], option [03].) The item can still follow schedules or PGM output assignments, if programmed.

See section 6.5, *Programming Automation Item Options* for more information.

Event Initiated and Scheduled Automation Item Activation

In addition to manual and global control, you can program Automation items to follow pre-set schedules, and/or the state of programmable outputs on the control panel (PGM outputs). PGM

outputs can be programmed to activate when events occur. See your system's *Installation Manual* for more information on PGM outputs.

Enter a 2-digit number in sections [134]-[289] to determine how the Automation item will operate.

.....
Automation Item Schedule/
Output Condition sections [134] - [289]
.....

(00) Does not follow schedules or PGM outputs

The item will not follow schedules or PGM output assignments.

(01) Event Initiated (Follows PGM Output Only):

The item will follow the state of its assigned PGM output. See *Assigning Automation Items to PGM Outputs* in section 6.8.

Example: Item 1 controls a light. If item 1 is assigned to a PGM programmed to follow alarm status, the light will be on when the system is in alarm, and off when the system is not in alarm.

(02) Follows Schedule Only: The item will follow its assigned schedules. See section 6.6, *Assigning Automation Items to Schedules*.

Example: Item 1 controls a light. If item 1 is assigned to schedule 3, which activates at 19:00 and deactivates at 22:00 every day, the light will turn on at 7:00pm and off at 10:00pm every day.

(03) Follows Schedule or Event Initiation (PGM Output):

The item activates when its assigned schedules are active. The item will also activate when its assigned PGM output is active. If the schedules and the output are active at the same time, the item will also be active. See *Assigning Automation Items to Schedules* and *Assigning Automation Items to PGM Outputs* (sections 6.6 and 6.8).

Example: Item 1 controls a light. Item 1 is assigned to schedule 3, which activates at 19:00 and deactivates at 22:00 every day and a PGM output programmed to follow alarm status.

The light will be on between 7:00pm and 10:00pm every day. If the system goes into alarm any time, the light will turn on.

(04) Follows Schedule and Event Initiation (PGM Output):

The item activates only when its assigned schedules are active at the same time as the

assigned PGM output is active. See *Assigning Automation Items to Schedules* and *Assigning Automation Items to PGM Outputs* (sections 6.6 and 6.8).

Example: Item 1 controls a light. Item 1 is assigned to schedule 3, which activates at 19:00 and deactivates at 22:00 every day and a PGM programmed to follow arming status.

If the system is armed between 7:00pm and 10:00pm, the light will be on during that time. If the system is *disarmed* between 7:00pm and 10:00pm, the light will *be off*, but may still be controlled manually by a user on or off the premises.

6.4 Programming the House Code & Unit Number

Each Automation item has a unique address selected by dials on the X-10 module. To select the X-10 address, use one dial to select a letter from A through P, and the other dial to select a number from 1 through 16.

To enable the VPM5580TC to control the item, program the X-10 address into the VPM5580TC as the **Automation Item House Code and Unit Number**. Refer to the *Automation Item House Code & Unit Number Chart* located in Appendix B for the 3-digit number that corresponds to the dial settings. Program this 3-digit number into the VPM5580TC for each Automation item, in sections [130] to [285].

.....
Automation Item House Code
& Unit Number Section [130] to [285]
.....

6.5 Programming Automation Item Options

Turn options 01-10 in sections [131] - [286] ON or OFF to define how each Automation item will work.

Option [01]: Item Enabled

Turn this option ON to enable the Automation item.

Option [02]: User controlled On/Off

User Controlled ON/OFF. When ON, the user will be able to use the Automation command to turn the Automation item on or off.

Example: the user could access the system from a remote telephone to open the blinds to let their plants get sunlight.

Not User Controlled. When OFF, users will not be able to use the Automation command to turn the Automation item on or off. The item may still be controlled by a Schedule or Alarm System Output.

Option [03]: Global On/Off

Included in Global ON/OFF Command. When ON, the Automation item will turn ON or OFF when a user executes the Global Item Control function from the Automation command. For this option to work, option (02) **User Controlled ON/OFF** must be on as well.

Example: the user may have several lights downstairs. At bedtime, the user could turn off all the lights by issuing a Global Off command through the Automation menu. All lights included in the Global Command would be turned off.

Not included in Global ON/OFF Command. When OFF, the Automation item will not be affected by the Global Item Control function.

Option [04]: Dimming

Dimming Enabled. When ON, the user can select any of 6 dimming states for the Automation item: ON, OFF, and levels 1 through 4. Only use this option for lights or other items connected to power line modules capable of dimming.

Dimming Disabled. When OFF, the user can only select ON or OFF for the Automation item.

Option [05]: Mode Option

Follows Schedule / Output Condition Always. The Automation item will always follow the Schedule / Output condition programmed in the Item Schedule / Output Condition programming section.

Follows Schedule / Output Condition only when Mode is ON. The Automation item will follow the Schedule / Output Condition only when a *mode* assigned to the item is ON. Use this function for items you want to selectively follow a schedule or PGM output. A lawn sprinkler system is a typical application of this function.

See section 6.3 for more information on Schedule/Output Condition options. See section 8 for more information on how to program modes.

Option [06]: Duration Options

Item ON Steady while Active. When ON, the Automation item will remain activated until it is deactivated by the user, a schedule or a PGM output.

Programmed Pulse when Active. Use this option to trigger devices requiring a trigger pulse, or to activate an item for a specific length of time. The Automation item will be activated for the length of time programmed in the item's **Automation Item Pulse Timer** section (programming sections [301] to [332]). Valid entries are 001 to 255 seconds.



Do not use the Programmed Pulse When Active feature if Dimming is enabled. All pulses turn the Automation item ON.

.....
Automation Item
Pulse Timer sections [301] - [332]
.....

Option [07]: Prompt Option 1

Item prompt is "ON / OFF". When users enter Automation, the VPM5580TC will announce "ON" or "OFF" for the Automation item's ON and OFF states. This prompt would be used for devices such as lights or appliances.

Option [08]: Prompt Option 2

Item prompt is "OPEN / CLOSED". When users enter Automation, the VPM5580TC will announce "OPEN" and "CLOSED" for the Automation item's ON and OFF states. This prompt would be used for applications such as curtains and door openers.

Option [09]: Prompt Option 3

Item prompt is "SETBACK ON/SETBACK OFF". When users enter Automation, the VPM5580TC will announce "SETBACK ON" and "SETBACK OFF" for the Automation item's ON and OFF states. This prompt is only for Automation items and will *not* be announced for any thermostats connected and programmed as described in section 9.



Only turn on one of options 07, 08 or 09. If more than one option is ON, the system will use the first enabled option. If none of the options are ON, the system will use option 07.

Option [10]: Zone Follower Option

Zone Follower Enabled. Turn this option ON if the Automation item will be following the status of a zone. See section 6.9 for further instructions on programming Automation items to follow zones.

.....
Automation Item Options sections [131] - [286]
.....

6.6 Assigning Automation Items to Schedules

There are 16 Automation schedules in the VPM5580TC which determine the ON time, OFF time and Day Mask. See section 7, *Automation Schedule Programming* for information on programming the schedules. To program an Automation item to follow a particular schedule, turn ON the option corresponding to the number of the schedule (e.g. turning ON only option 01, programs the Automation item to follow only schedule number 1).

.....
Schedule Programming .. sections [030] - [077]
Automation Item
Schedule Assignment sections [132] - [289]
.....

6.7 Assigning Automation Items to Modes

Mode assignment gives users control over groups of Automation items programmed for scheduled or event initiated operation. You can assign any Automation item to one or more of 8 modes.

Users can turn modes on or off using the Automation menu. If the **Follows Schedule/Output only if a Mode is ON** option (section [133]:[05]) is enabled, when a user turns on one or more modes to which the item is assigned, the Automation item will activate at the scheduled times or when an event occurs. If all of the modes an item is assigned to are OFF, the item will not activate.

To assign an Automation item to one or more modes:

- 1. Enter the section number corresponding to the Automation item ([133] - [288]).
- 2. Turn on one or more options corresponding to the mode(s) you want the item to follow.

! *If you assign an item to more than one mode, the item follows its assigned schedules when any of its assigned modes are ON. To prevent an item assigned to more than one mode from following any of its assigned schedules, ALL the modes assigned to the item must be turned OFF.*

Example: If the users will be away for a period of time, they can use Automation to turn on a {Holiday mode}.

- Assign Automation items such as lights and drapery to a mode (e.g. mode 01).
- Program the schedules and/or programmable outputs for the items in such a way that the premises will appear occupied.
- Program the VPM5580TC to announce an appropriate label, such as {Holiday Mode} for mode 01.

When the users turn on mode 01 {Holiday mode}, the lights and drapery will activate according to the programmed schedules and PGM output options.

To provide users with an easier method of turning on any mode, see section 8.3 "Programming Modes to Follow PGM Outputs".

.....
Automation Item
Mode Assignment sections [133] - [288]
Follows Schedule/Output
only if Mode On sections [131] to [286]: [05]
.....

! *Program Automation Items 2 through 32 in sections [135] - [289] in the same manner as Automation Item 1 (refer to sections [130]-[134] and the Programming Worksheets for programming instructions).*

6.8 Assigning Automation Items to PGM Outputs

You can assign an Automation item to follow a panel event (e.g. a fire or burglary alarm, or a [★][7][1-4] command). To do this, assign the item to a PGM output programmed to follow the same event. See your control panel Installation Manual for a list of available panel events (PGM output options).

Example: if you assign item 1 to follow a PGM output programmed as Command Output 1, the item will activate or deactivate whenever the user activates the command output (e.g. using [★][7][1]).

To assign an item to a PGM output:

- 1. Enter the 3-digit section number corresponding to the Automation item you want to program [401] - [432].
- 2. Enter the 2-digit number of the PGM output you want the item to follow (01-14).
- 3. If you have assigned item(s) to a PGM output programmed as a Command Output ([*][7][1-4]), you can program a label for the Command Output in programming sections [545] - [548] (Output Control labels). See section 3.4, "Programming Label Entry Sections".

! *Up to 4 Automation items can be programmed to follow any one PGM output on the system.*

.....
Automation Item
Output Follower sections [401] - [432]
.....

6.9 Programming Automation
Items to Follow Zones

You can program Automation items to turn on when one or more zones are “tripped” (i.e. a door is opened or closed, or a motion detector is triggered). To do this:

- enable the **Zone Follower** option for the Automation item (see section 6.5)
- assign the Automation item to one or more zones in section [291].

Program how long the Automation item will remain on after the zone(s) is tripped and restored in section [290] **Zone Follower Timer**. There is only one timer and it applies to all the Automation items.

.....
Zone Follower EnableSections [131]-[286]: [10]
Zone Follower Timer Section [290]
Zone Follower Items Section [291]
.....

Automation Schedule Programming

S E C T I O N 7

7.1 Programming Schedules

Program schedules for controlling Automation items and thermostat occupancy settings in sections [030] - [077]. There are 3 programming sections for each schedule:

- **Schedule On Time**
- **Schedule Off Time**
- **Day of Week Mask.**

On selected days of the week any Automation items or thermostat occupancy settings assigned to the schedule will be turned on at the Schedule On Time and turned off at the Schedule Off Time, which may be the next day. Schedule Off Times will not affect thermostat occupancy settings.

Example:

You want to program Automation item 1 (a premises light) to turn ON Wednesday at 9:00pm and turn OFF Thursday at 3:00am. Assign Automation item 1 to schedule 1 and program schedule 1 as follows:

ON Time - 2100

OFF Time - 0300

Day of Week Mask - Wednesday ON (Sunday-Tuesday and Thursday-Saturday OFF).

See section 6.6 for information on assigning Automation items to schedules. See section 9.6 for information on assigning thermostat occupancy settings to schedules.

If the Automation item's **Automation Item Pulse Timer** is programmed, the item will be active for the pulse time programmed, then it will turn off. The schedule Off Time will not need to be programmed as it will not affect the output. You will also need to program the Automation item to follow the timer. See section 6.5 for more information.

• • • • •	
Schedule On Time	Section [030] to [075]
Schedule Off Time	Section [031] to [076]
Day of Week Mask	Section [032] to [077]
Automation Item Pulse	
Timer	Section [301] to [332]
• • • • •	

Mode Programming

S E C T I O N 8

Mode assignment gives users control over groups of Automation items and/or thermostat occupancy settings. You can assign any Automation item or thermostat occupancy setting to one or more of 8 modes. Users can turn modes on or off using the Automation menu, or if programmed, [★][7][1-4] commands.

8.1 Automation Items and Modes

Section 6, “Automation Item Programming” explains in detail the programming you need to do to assign Automation items to follow modes.

Example: The users have a sprinkler system and would like it to follow a schedule on the days the sprinkler is needed.

To set up the system in this example, you would need to:

- Enable and program Automation item 1 (the sprinklers).
- Program a schedule (e.g. schedule 1) to be active for the desired time period, every day of the week.
- Assign Automation item 1 to schedule 1.
- Assign Automation item 1, to a mode (e.g. mode 1).
- Turn section [131], option [05] OFF.
- Program a label for mode 1 that says {Sprinkler}.

When the users turn the {Sprinkler} mode on, the sprinklers will activate according to schedule 1. When the users don't want the sprinklers on, they can turn the {Sprinkler} mode off.



If you assign an item to more than one mode, the item follows its assigned schedules when any of its assigned modes are ON. To prevent an item assigned to more than one mode from following any of its assigned schedules, ALL the modes assigned to the item must be turned OFF.

You can also program modes to be turned on or off by PGM outputs. See section 8.3 for more information.

8.2 Thermostat Occupancy Settings and Modes

Each thermostat has 4 occupancy settings (Day, Night, Aux, or Away settings). Each setting is a range of temperatures the thermostat will follow when the setting is active. You can program each occupancy setting on each thermostat to follow modes.

To do this, disable one or more of options 05-08 in sections [800], [821], [842] or [863]. When a user turns on a mode, the selected occupancy setting will activate at the scheduled times or when an event occurs. If all of the modes a setting is assigned to are OFF, the setting will not activate according to schedules or panel events.

Example: The users will be on vacation and would like thermostat 1 to follow the Away occupancy setting.

To set up the system in this example, you would need to:

- Assign the Day, Night, and Away occupancy settings for thermostat 1 to follow modes (in section [800] turn options [05], [06], and [08] OFF).
- Assign the Day and Night settings for thermostat 1 to mode 1 (in sections [802] and [807] turn option [01] ON).
- Assign the Away setting for thermostat 1 to mode 2 (in section [817] turn option [02] ON).
- Program a schedule (e.g. schedule 01) so that the Away occupancy setting will be active the whole week.
- Assign the Away setting for thermostat 1 to schedule 1 (in section [816] turn option [01] ON).
- Program the Away setting for thermostat 1 to follow schedules only (in section [818], program (02)).
- Program appropriate labels for modes 01 and 02 (e.g. {Home mode} and {Holiday mode}).
- Program the Away occupancy setting for the desired temperature range using the [★][5] menu.

When the users turn mode 01 {Home mode} off, and mode 02 {Holiday mode} on, thermostat 1 will follow the Away occupancy setting.

! *If you assign an occupancy setting to more than one mode, the item follows its assigned schedules/PGM outputs when any of its assigned modes are ON. To prevent an item assigned to more than one mode from following any of its assigned schedules/PGM outputs, ALL the modes assigned to the item must be turned OFF.*

8.3 Programming Modes to Follow PGM Outputs

You can assign any mode to follow a panel event (e.g. a fire or burglary alarm, or a [★][7][1-4] command). To do this, assign the mode to a PGM output programmed to follow the same event. There can be up to 14 PGM outputs, depending on the control panel.

See your control panel Installation Manual for a list of available panel events (PGM output options).

Example 1:

If the users will be away for a period of time, they may want to turn on a {Holiday mode}. You can program a mode to control items such as lights and drapery in such a way that the premises will appear occupied. See the example in section 6.7 for a description of programming for a {Holiday mode}.

If you have programmed mode 01 as a {Holiday Mode}, you can assign it to a PGM output programmed as Command Output 1 ([★][7][1]). Now, when users want to turn ON the {Holiday Mode}, they only need to enter [★][7][1] at any keypad.

Modes turned ON this way override other modes or schedules that might be running.

NOTE: *In order for the VPM5580TC to announce {Holiday Mode} for a mode or command output, you must program a label for the mode or command output.*

Example 2:

A thermostat may be set up so that, normally, the Day and Night Occupancy Settings together control its operation 24 hours a day, each day of the week. If the users will be away for a period of time, they may want to turn on the thermostat's Away setting which is set up for a different temperature range 24 hours a day, 7 days a week.

To have the Away setting override the Day and Night settings, assign the Away setting to a mode (e.g. mode 02). You can assign mode 02 to a PGM output programmed as Command Output 2 ([★][7][2]). The users can then enter [★][7][2] at any keypad to turn on mode 02. When mode 02 is turned on this way, it turns on the Away occupancy setting, overriding the Day and Night Occupancy settings, until the users enter [★][7][2] again.

To assign a mode to a PGM output:

- 1. Enter section [292], **PGM Mode Enable**.
- 2. Enter the 2-digit number of the PGM output you want the mode(s) to follow
- 3. Enter the 2-digit number(s) of the mode(s) you want the PGM output to activate.
- 4. To exit, press [#].

If you assign a mode to a PGM programmed as Command Output 1-4, you can program the VPM5580TC to announce a label (e.g. {Holiday mode}) whenever it refers to the Command Output. See section 3.4 for information on programming labels.

.....
PGM Mode Enable Section [292]
.....
Command Output Labels Sections [545] - [548]
.....

Temperature Control Programming

S E C T I O N 9

9.1 How Temperature Control Works



Temperature control will only work on control panels that:

- **support VPM5580TC modules**
- **have software version 2.x or higher.**

If the control panel supports VPM5580TC modules, but has a software version less than v2.x, all VPM5580TC functions are available with the exception of temperature control.

The VPM5580TC can detect and control the indoor temperature of the premises when 1 - 4 thermostats are connected. Each thermostat can have up to six EMS-ITS indoor sensors to detect, average and display the interior temperature. If an EMS-OTS outdoor sensor is connected to a thermostat, the VPM5580TC can detect and display outdoor temperature. (Refer to the EMS thermostat and EMS-ITS/OTS *Installation Instructions* for more information on these devices.)

The indoor and outdoor temperature can be displayed on the EMS thermostat and on an LCD keypad connected to the security system. The LCD keypad will display the temperature of a selected thermostat when it is not in use (see the *VPM5580TC Instruction Manual*).

Each thermostat can be connected to a heating device (e.g. furnace), a cooling device (e.g. air conditioner) or both.

Users can control indoor temperature directly at the thermostat, through the LCD keypad or using the VPM5580TC. In addition, the VPM5580TC can automatically control the temperature using schedules and PGM outputs available in the system. This is done in a similar manner to Automation item control.

Thermostat Modes

Each thermostat has 4 different Thermostat Modes:

- Cool
- Heat
- Automatic
- Off

If the thermostat is connected to a cooling device (e.g. air conditioning), use the Cool mode to maintain the temperature below a certain level. If the thermostat is connected to a heating device (e.g. furnace), use the Heat mode to maintain the temperature above a certain level. If the thermostat is connected to both a cooling device and a heating device, use the Automatic mode to maintain the temperature within a certain range with both the heating and cooling devices. You can stop temperature control by selecting the Off mode.

Users can change thermostat modes using the VPM5580TC, the thermostat, or a system keypad.

Occupancy Settings

Each thermostat has four different temperature ranges that can be programmed. These temperature ranges are called Occupancy Settings:

- Day Occupancy Setting
- Night Occupancy Setting
- Auxiliary Occupancy Setting
- Away Occupancy Setting.

These occupancy settings allow users to easily change the temperature range for the area controlled by the thermostat. Depending on which Thermostat Mode is turned on, the thermostat will use either heating or cooling devices to maintain the temperature within the range programmed for the occupancy setting.

Example: A user wants the temperature in the building to be 21 - 23°C in the day time and 15-17°C in the evening. Using the Home Automation menu, program the Day Occupancy setting for 21-23°C and the Night Occupancy setting for 15-17°C. (See the *VPM5580TC Instruction Manual* for information on changing Occupancy Setting temperature ranges.)

A thermostat may be switched to a different Occupancy setting:

- by the user through the VPM5580TC, the thermostat or the keypad
- by automatic control using schedules and/or PGM outputs in the system.

Occupancy settings do not need to be turned off. A thermostat will follow the occupancy setting it is in until switched to another one.

9.2 Programming Temperature Control Operation

To tell the VPM5580TC how temperature control should work, program the operation of each thermostat and each Occupancy setting in programming sections [800] through [882]. For each thermostat, you need to:

- Select an **address** (see section 9.3)
- **Enroll** the thermostat and program various operating **options** (see section 9.5)

For each Occupancy setting used on each thermostat you need to:

- Select how the Occupancy setting will follow schedules and/or PGM outputs by programming an **output condition** for the Automation item (see section 9.4)
- Select which **schedules** (if any) the Occupancy setting will follow (see section 9.6)
- Select which **modes** (if any) the Occupancy setting will follow (see section 9.7)
- Select which **PGM output** (if any) the Occupancy setting will follow (see section 9.8)

Programming sections for thermostat 01 ([800] through [819]) are described in detail in sections 9.3 to 9.7. If additional thermostats are connected, program them in the same manner.


In addition, you may need to program one or more of the following:

- The **On Time, Off Time and Days of the Week** of each schedule to be used (see section 7).
- **Thermostat Labels**, to program what the VPM5580TC will say when referring to a thermostat item (see section 3.4).
- **Mode Labels**, to program what the VPM5580TC will say when referring to a mode (see section 3.4).

9.3 Selecting an Address for a Thermostat

Each EMS thermostat connected in the system must be given an address (01-04). Do the following at each thermostat on the system:

1. On the EMS thermostat, press and hold the Mode key and the Fan key together for 10 seconds. The display on the EMS thermostat will show a 2-digit number from 01-99. This number is the current address of the thermostat.
2. Use the arrow keys on the EMS thermostat to scroll through the numbers until the desired number is displayed (01-04). The VPM5580TC only supports thermostat addresses 01-04.
3. To save the thermostat address and exit, press either the Mode key or the Fan key on the EMS thermostat.

 **Thermostats must be assigned in sequence. If you remove a thermostat for any reason, you must reassign address numbers 01, 02 and 03 to the remaining thermostats.**

9.4 Programming How Occupancy Settings Are Turned On

You can program occupancy settings to follow pre-set schedules, and/or the state of PGM outputs. PGM outputs can be programmed to activate when events occur (e.g. system arming). See your system's Installation Manual for more information on PGM outputs.

Enter a 2-digit number in sections [803]-[881] to determine how each occupancy setting for each thermostat will operate.

.....
Occupancy Setting Schedule/
Output Condition sections [803] - [881]
.....

(00) Does not follow schedules or PGM outputs

Occupancy settings can always be switched manually through the VPM5580TC. If only manual control is desired (no automatic control), then program the Occupancy Mode Schedule /Output Condition as [00] (No Schedule or Output Control).

To access temperature control through the VPM5580TC (either locally or remotely), use the Automation menu as described in the Instruction Manual.

(01) Event Initiated (Follows PGM Output Only):

The occupancy setting will follow the state of its assigned PGM output. See *Assigning Occupancy Settings to PGM Outputs* in section 9.8.

Example: If the Day occupancy setting is assigned to a PGM programmed to follow arming status, the VPM5580TC will switch the thermostat to the Day setting whenever the system is armed.

(02) Follows Schedule Only: The item will follow its assigned schedules. See *Assigning Schedules for Temperature Control* (section 9.6).

Example: If the Night occupancy setting is assigned to schedule 3, which activates at 19:00, the VPM5580TC will switch the thermostat to the Night setting at 7:00pm every day. The thermostat will remain switched to the Night setting until a user, another schedule or an event switches it to another setting.

(03) Follows Schedule or Event Initiation (PGM Output):

The occupancy setting activates when its assigned schedules are active. The occupancy setting will also activate when its assigned PGM output is active. If the schedules and the output are active at the same time, the occupancy setting will also be active. See *Assigning Schedules for Temperature Control* and *Assigning Occupancy Settings to PGM Outputs* (sections 9.6 and 9.8).

Example: The Night occupancy setting is assigned to schedule 3, which activates at 19:00 and deactivates at 06:00 the next day and a PGM output programmed to follow arming status.

The VPM5580TC will switch the thermostat to the Night setting at 7:00pm every day. Also, whenever the system is armed, the VPM5580TC will switch the thermostat to the Night setting.

(04) Follows Schedule and Event Initiation (PGM Output):

The occupancy setting activates only when its assigned schedules are active at the same time as the assigned PGM output is active.

See *Assigning Schedules for Temperature Control* and *Assigning Occupancy Settings to PGM Outputs* (sections 9.6 and 9.8).

Example: The Day occupancy setting is assigned to schedule 4, which activates at 09:00 and deactivates at 22:00 every day and a PGM programmed to follow arming status.

If the system is armed between 9:00am and 10:00pm, the VPM5580TC will switch the thermostat to the Day occupancy setting. If the system is *disarmed* between 9:00am and 10:00pm, the VPM5580TC will *not* switch the thermostat to the Day occupancy setting. The thermostat will continue to use whatever setting it was in previously.

9.5 Selecting Thermostat Options

Turn options 01-08 in sections [800], [821], [842], [863] ON or OFF to define how each thermostat item will work. Sections [800], [821], [842], [863] are the options for thermostats 1, 2, 3 and 4 respectively.

Option [01]: Thermostat Enrolled

Turn this option ON for each thermostat that is connected.

Option [02]: Exterior Temperature Sensor

Turn this option ON if there is an EMS-OTS connected to the thermostat.

Option [03]: Heat Enabled

Turn this option ON if the thermostat is connected to, and controlling, a heating device.

Option [04]: Cool Enabled

Turn this option ON if the thermostat is connected to, and controlling, a cooling device.

Option [05]: Day Setting Mode Option

Follows Schedule / Output Condition Always.

The Day Occupancy Setting will always follow the Schedule / Output condition programmed in the

Day Occupancy Setting Schedule / Output Condition programming section, regardless of modes 01-08.

Follows Schedule/Output Condition only when Mode is ON. The Day Occupancy Setting will follow the Schedule / Output Condition only when a *mode* assigned to the Day Setting is ON.

See section 9.4 for more information on Schedule/Output Condition options. See section 8 for more information on how to program modes.

Option [06]: Night Setting Mode Option

Similar to option [05], only for the Night Occupancy Setting. See section 9.4 for more information on Schedule/Output Condition options. See section 8 for more information on how to program modes.

Option [07]: Auxiliary Setting Mode Option

Similar to option [05], only for the Auxiliary Occupancy Setting. See section 9.4 for more information on Schedule/Output Condition options. See section 8 for more information on how to program modes.

Option [08]: Away Setting Mode Option

Similar to option [05], only for the Away Occupancy Setting. See section 9.4 for more information on Schedule/Output Condition options. See section 8 for more information on how to program modes.

9.6 Assigning Schedules for Temperature Control

There are 16 Automation Schedules in the VPM5580TC which determine the ON time, OFF time and Day Mask. See section 7, *Automation Schedule Programming* for information on programming the schedules.

As with Automation items, each of the 4 occupancy settings (Day, Night, Auxiliary, Away) of each thermostat can be programmed to automatically be turned ON by one or more of the schedules in the VPM5580TC.

Example: If you assign the Day and Night Occupancy Settings to different schedules, the VPM5580TC can automatically turn the Day setting on in the day time and the Night setting on in the evening.

To program an occupancy setting to follow one or more schedules, turn ON the options corresponding to the numbers of the schedules (e.g. turning ON only option 01, programs the occupancy setting to follow only schedule number 1).

Do not assign the same schedule to two different occupancy settings of the same thermostat. For example, you should not assign schedule (15) to both the Day Occupancy setting and the Night Occupancy setting of Thermostat 1.

.....
Schedule Programming .. sections [030] - [077]
Occupancy Setting
Schedule Assignment sections [801] - [879]
.....

9.7 Assigning Occupancy Settings to Modes

Mode assignment gives users control over groups of Automation items or occupancy settings, programmed for scheduled or event initiated operation. You can assign any occupancy setting (Day, Night, Auxiliary & Away) to one or more of 8 modes.

Users can turn modes on or off using the Automation menu. To have an occupancy setting follow a mode, turn on the **Follows Schedule/Output only if a Mode is ON** option for the occupancy setting (see section 9.5). Then, assign the occupancy setting to one or more modes. When the user turns on one or more modes to which the occupancy setting is assigned, the occupancy setting will activate at the scheduled times or when an event occurs. If all of the modes an occupancy setting is assigned to are OFF, the setting will not activate according to schedules/events.

To assign modes, enter the appropriate section number, and turn options 01 – 08 ON or OFF. Options 01 – 08 represent modes 1 – 8 respectively. If the option is ON, automatic control of the selected occupancy setting for the selected thermostat will be dependent on that mode (the mode must be turned ON to enable automatic control). If the option is OFF, automatic control is not dependent on that mode.

See the example in section 8.2, “Thermostat Occupancy Settings and Modes”.

To provide users with a simple method of turning on any mode, see section 8.3 “Programming Modes to Follow PGM Outputs”.

! If you assign an occupancy setting to more than one mode, the item follows its assigned schedules/PGM outputs when any of its assigned modes are ON. To prevent an item assigned to more than one mode from following any of its assigned schedules/PGM outputs, ALL the modes assigned to the item must be turned OFF.

-
- Occupancy Setting
- Mode Assignment sections [802] - [880]
- Follows Schedule/Output
- only if Mode On .. sections [800] to [863]: [05]-[08]
-

9.8 Assigning Occupancy Settings to PGM Outputs

You can assign an occupancy setting to follow a panel event (e.g. a fire or burglary alarm, or a [★][7][1-4] command). To do this, assign the occupancy setting to a PGM output programmed to follow the same event.

See your control panel Installation Manual for a list of available panel events (PGM output options).

Example: if you assign the Auxiliary occupancy setting to follow a PGM output programmed as Command Output 1, the VPM5580TC will switch the thermostat to the Auxiliary setting whenever the user activates the command output (e.g. using [★][7][1]).

Please refer to your control panel’s Installation Manual for a complete description of available PGM output options.

To assign an occupancy setting to a PGM output:

1. Enter the 3-digit section number corresponding to the occupancy setting of the thermostat you want to program [804] - [882].
2. Enter the 2-digit number of the PGM output you want the item to follow (01-14).
3. If you have assigned occupancy settings to PGM outputs programmed as a Command Outputs ([★][7][1-4]), you can program a label for the Command Output in programming sections [545] - [548] (Output Control labels). See section 3.4, “Programming Label Entry Sections”.

! Do not program two Occupancy Settings on the same thermostat to follow the same PGM output in the system.

-
- Occupancy Setting
- Output Follower sections [804] - [882]
- Command Output Labels Sections [545] - [548]
-

Emergency Keys (Fire, Auxiliary Panic)

S E C T I O N 1 0

This feature allows the FAP emergency keys to be enabled or disabled per station. These keys operate as part of the DSC security panel interfaced to the Communiqué through the Security Interface Card.

Note: If the DSC security panel is not interfaced to the Communiqué, the FAP keys will not function from any station regardless of how this feature is programmed.

To access this function, press the [PGM] key three times. The display may prompt you for the Installer PIN. If the correct PIN is entered, or if no PIN is required, the display will read...

```
Select Installer  
Program Item
```

Press the [SECURITY] key. The key will begin to flash slowly and the display will read...

```
Security Keys  
Enable/Disable
```

Press the [SECURITY] key again. DSS keys 10 through 33 will be lit solid and the display will read...

```
Select Station
```

Select the station you wish to program by pressing the corresponding lit DSS key. For example, if the DSS 10 key is pressed, the key will start flashing slowly and the display will read...

```
Station 10  
Prog FAP keys
```

The FAP keys will be either flashing quickly or lit solid depending on how they were previously programmed.

- Flashing quickly: The feature is enabled.
- Lit solid: The feature is disabled.

To enable or disable each of the Security keys, press the desired key and the setting will be toggled.

When the programming of the keys for a particular station is finished, press the PGM key to save the changes.

To select another station to program, press another DSS key.



The Emergency keys will not function from any keyset that is in a programming section, including the radio programming section.

Programming Worksheets

S E C T I O N 1 0

System Programming

[001] VPM5580TC Service Code

Default

5580

Enter 4 decimal digits

[002] First System Options

Default

ON ☐ Option 01

OFF ☐ Option 02

OFF ☐ Option 03

OFF ☐ Option 04

OFF ☐ Option 05

OFF ☐ Options 06-08

Option ON

Partition 1 Access Enabled

Partition 2 Access Enabled

Home Automation Enabled

Automation requires
access code

AC = 50Hz

Options 06-08 For Future Use

Option Off

Partition 1 Access Disabled

Partition 2 Access Disabled

Home Automation Disabled

No access code req'd
for Automation

AC = 60 Hz

[003] Status Prompt Mask

Default

ON ☐ Option 01

ON ☐ Option 02

ON ☐ Option 03

ON ☐ Option 04

ON ☐ Option 05

ON ☐ Option 06

ON ☐ Option 07

ON ☐ Option 08

ON ☐ Option 09

ON ☐ Option 10

ON ☐ Option 11

ON ☐ Option 12

Option ON

Warning Bypass On Prompt enabled

System Trouble Prompt enabled

System Open, Zone Prompt enabled

Alarms in Memory Prompt enabled

Service Required Prompt enabled

AC Power Trouble Prompt enabled

Telephone Line Trouble Prompt enabled

Communication Trouble Prompt enabled

Zone Fault Prompt enabled

Zone Tamper Prompt enabled

Zone Low Battery Prompt enabled

Time and Date Incorrect Prompt enabled

Option Off

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

Prompt disabled

[004] Star Function Prompt Mask

Default		Option ON		Option Off
ON	<input type="checkbox"/>	Option 01 <i>For Zone Bypassing</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 02 <i>For System Troubles</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 03 <i>For Alarm Memory</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 04 <i>For Door Chime Control</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 05 <i>For Automation Control</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 06 <i>For Special Functions</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 07 <i>For "Output Control"</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 08 <i>For Arming Without Entry</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 09 <i>For Quick Arming</i>	Prompt enabled	Prompt disabled
OFF	<input type="checkbox"/>	Option 10 <i>For Quick Exit</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 11 <i>To Arm Interior Zones</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 12 <i>For Volume Control</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 13 <i>For Speech Rate Control</i>	Prompt enabled	Prompt disabled
OFF	<input type="checkbox"/>	Options 14-15 For Future Use		
ON	<input type="checkbox"/>	Option 16 <i>For User Programming</i>	Prompt enabled	Prompt disabled

[005] Local Programming Lockout Counter

Default: 000 (Valid entries are 000-255 attempts)

[006] Local Programming Lockout Duration

Default: 000 (Valid entries are 000-255 minutes)

[007] Number of Home Automation Transmissions

Default: 001 (Valid entries are 000-255 powerline transmissions)

[008] Thermostat Prompt Mask

Default		Option ON		Option Off
ON	<input type="checkbox"/>	Option 01 <i>To Set Temperature</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 02 <i>For Occupancy Mode</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 03 <i>For Thermostat Mode</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 04 <i>For Fan Control</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 05 <i>Occupancy Mode Is Aux.</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 06 <i>Occupancy Mode Is Day</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 07 <i>Occupancy Mode Is Away</i>	Prompt enabled	Prompt disabled
ON	<input type="checkbox"/>	Option 08 <i>Occupancy Mode Is Night</i>	Prompt enabled	Prompt disabled
OFF	<input type="checkbox"/>	Option 9-16 <i>For Future Use</i>		

[021] Telephone Access Options

Default		Option ON		Option Off
OFF	<input type="checkbox"/>	Option 01 Local Access Only		Remote and Local Access enabled
OFF	<input type="checkbox"/>	Option 02 Access code always req'd for security system access		No code req'd for security system access



Local Access Only must be ON for UL Listed installations.

Schedule Programming

Sections ‘e.g. [030]’ to ‘e.g. [032]’ show the programming to be completed for each schedule, using Schedule1 as an example. Complete the programming for schedules 02-16 in a similar manner. Record your programming in the table below the examples.

e.g. [030] Schedule 1 On-Time

Default
9999 (Valid entries are 0000-2359, 9999 to disable)

e.g. [031] Schedule 1 Off-Time

Default
9999 (Valid entries are 0000-2359, 9999 to disable)

e.g. [032] Schedule 1 Day Mask

Default	Option ON	Option Off
ON <input type="checkbox"/>	Option 01 Activates on Sunday	Does Not Activate on Sunday
ON <input type="checkbox"/>	Option 02 Activates on Monday	Does Not Activate on Monday
ON <input type="checkbox"/>	Option 03 Activates on Tuesday	Does Not Activate on Tuesday
ON <input type="checkbox"/>	Option 04 Activates on Wednesday	Does Not Activate on Wednesday
ON <input type="checkbox"/>	Option 05 Activates on Thursday	Does Not Activate on Thursday
ON <input type="checkbox"/>	Option 06 Activates on Friday	Does Not Activate on Friday
ON <input type="checkbox"/>	Option 07 Activates on Saturday	Does Not Activate on Saturday

	On Time	Off Time	Day Mask 01 02 03 04 05 06 07
Schedule 1	[030] <input type="text"/>	[031] <input type="text"/>	[032] <input type="text"/>
Schedule 2	[033] <input type="text"/>	[034] <input type="text"/>	[035] <input type="text"/>
Schedule 3	[036] <input type="text"/>	[037] <input type="text"/>	[038] <input type="text"/>
Schedule 4	[039] <input type="text"/>	[040] <input type="text"/>	[041] <input type="text"/>
Schedule 5	[042] <input type="text"/>	[043] <input type="text"/>	[044] <input type="text"/>
Schedule 6	[045] <input type="text"/>	[046] <input type="text"/>	[047] <input type="text"/>
Schedule 7	[048] <input type="text"/>	[049] <input type="text"/>	[050] <input type="text"/>
Schedule 8	[051] <input type="text"/>	[052] <input type="text"/>	[053] <input type="text"/>
Schedule 9	[054] <input type="text"/>	[055] <input type="text"/>	[056] <input type="text"/>
Schedule 10	[057] <input type="text"/>	[058] <input type="text"/>	[059] <input type="text"/>
Schedule 11	[060] <input type="text"/>	[061] <input type="text"/>	[062] <input type="text"/>
Schedule 12	[063] <input type="text"/>	[064] <input type="text"/>	[065] <input type="text"/>
Schedule 13	[066] <input type="text"/>	[067] <input type="text"/>	[068] <input type="text"/>
Schedule 14	[069] <input type="text"/>	[070] <input type="text"/>	[071] <input type="text"/>
Schedule 15	[072] <input type="text"/>	[073] <input type="text"/>	[074] <input type="text"/>
Schedule 16	[075] <input type="text"/>	[076] <input type="text"/>	[077] <input type="text"/>

Automation Items

Sections 'e.g. [130]' to 'e.g. [134]' show the programming to be completed for each Automation item, using Item 1 as an example. Complete the programming for Automation items 02-32 in a similar manner. Record your programming in the sections that follow the example.

e.g. [130] Item 1 House Code and Unit Number

Default: 000 (Valid entries are 000-255 from chart on Appendix B)

e.g. [131] Item 1 Options

Default	Option	ON	OFF
OFF <input type="text"/>	01	Item enabled	Disabled
ON <input type="text"/>	02	User controlled (On/Off)	Not user controlled
OFF <input type="text"/>	03	Included in Global On/Off command	Not included
OFF <input type="text"/>	04	Dimming enabled	Disabled
ON <input type="text"/>	05	Follows Schedule / Output always	Follows S /O only if a Mode is ON
ON <input type="text"/>	06	Item is ON steady when active	Item activates for programmed time
ON <input type="text"/>	07	Item prompting is "On /Off"	Not this prompting
OFF <input type="text"/>	08	Item prompting is "Open /Close"	Not this prompting
OFF <input type="text"/>	09	Item prompting is "Seiback On/Off"	Not this prompting
OFF <input type="text"/>	10	Zone Follower enabled	Disabled

e.g. [132] Item 1 Schedule Assignment

Default	Option	ON	OFF
OFF <input type="text"/>	01	Follows Schedule 1	Does not follow Schedule 1
OFF <input type="text"/>	02	Follows Schedule 2	Does not follow Schedule 2
OFF <input type="text"/>	03	Follows Schedule 3	Does not follow Schedule 3
OFF <input type="text"/>	04	Follows Schedule 4	Does not follow Schedule 4
OFF <input type="text"/>	05	Follows Schedule 5	Does not follow Schedule 5
OFF <input type="text"/>	06	Follows Schedule 6	Does not follow Schedule 6
OFF <input type="text"/>	07	Follows Schedule 7	Does not follow Schedule 7
OFF <input type="text"/>	08	Follows Schedule 8	Does not follow Schedule 8
OFF <input type="text"/>	09	Follows Schedule 9	Does not follow Schedule 9
OFF <input type="text"/>	10	Follows Schedule 10	Does not follow Schedule 10
OFF <input type="text"/>	11	Follows Schedule 11	Does not follow Schedule 11
OFF <input type="text"/>	12	Follows Schedule 12	Does not follow Schedule 12
OFF <input type="text"/>	13	Follows Schedule 13	Does not follow Schedule 13
OFF <input type="text"/>	14	Follows Schedule 14	Does not follow Schedule 14
OFF <input type="text"/>	15	Follows Schedule 15	Does not follow Schedule 15
OFF <input type="text"/>	16	Follows Schedule 16	Does not follow Schedule 16

e.g. [133] Item 1 Mode Assignment

Default	Option	ON	OFF
OFF <input type="text"/>	01	Assigned to Mode 1	Not assigned to Mode 1
OFF <input type="text"/>	02	Assigned to Mode 2	Not assigned to Mode 2
OFF <input type="text"/>	03	Assigned to Mode 3	Not assigned to Mode 3
OFF <input type="text"/>	04	Assigned to Mode 4	Not assigned to Mode 4
OFF <input type="text"/>	05	Assigned to Mode 5	Not assigned to Mode 5
OFF <input type="text"/>	06	Assigned to Mode 6	Not assigned to Mode 6
OFF <input type="text"/>	07	Assigned to Mode 7	Not assigned to Mode 7
OFF <input type="text"/>	08	Assigned to Mode 8	Not assigned to Mode 8

e.g. [134] Item 1 Schedule/Output Condition

Default: 00 (Valid Entries are 00-04) (See Sections [401]-[432] for PGM Output Assignment)

[00] No Schedule or PGM Output control	[03] Schedule OR PGM Output
[01] PGM Output control only	[04] Schedule AND PGM Output
[02] Schedule control only	

Item 1

[130] House Code & Unit Number

[131] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[132] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[133] Mode Assignment

01

02

03

04

05

06

07

08

[134] Schedule/Output Condition

Item 2

[135] House Code & Unit Number

[136] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[137] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[138] Mode Assignment

01

02

03

04

05

06

07

08

[139] Schedule/Output Condition

Item 3

[140] House Code & Unit Number

[141] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[142] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[143] Mode Assignment

01

02

03

04

05

06

07

08

[144] Schedule/Output Condition

Item 4

[145] House Code & Unit Number

[146] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[147] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[148] Mode Assignment

01

02

03

04

05

06

07

08

[149] Schedule/Output Condition

Item 5

[150] House Code & Unit Number

[151] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[152] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[153] Mode Assignment

01

02

03

04

05

06

07

08

[154] Schedule/Output Condition

Item 6

[155] House Code & Unit Number

[156] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[157] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[158] Mode Assignment

01

02

03

04

05

06

07

08

[159] Schedule/Output Condition

- Item 7** **[160]** House Code & Unit Number
- [161]** Miscellaneous options
- [162]** Schedule Assignment
- [163]** Mode Assignment
- [164]** Schedule/Output Condition
- Item 8** **[165]** House Code & Unit Number
- [166]** Miscellaneous options
- [167]** Schedule Assignment
- [168]** Mode Assignment
- [169]** Schedule/Output Condition
- Item 9** **[170]** House Code & Unit Number
- [171]** Miscellaneous options
- [172]** Schedule Assignment
- [173]** Mode Assignment
- [174]** Schedule/Output Condition
- Item 10** **[175]** House Code & Unit Number
- [176]** Miscellaneous options
- [177]** Schedule Assignment
- [178]** Mode Assignment
- [179]** Schedule/Output Condition
- Item 11** **[180]** House Code & Unit Number
- [181]** Miscellaneous options
- [182]** Schedule Assignment
- [183]** Mode Assignment
- [184]** Schedule/Output Condition
- Item 12** **[185]** House Code & Unit Number
- [186]** Miscellaneous options
- [187]** Schedule Assignment
- [188]** Mode Assignment
- [189]** Schedule/Output Condition

- Item 13]** [190] House Code & Unit Number
- [191] Miscellaneous options
- [192] Schedule Assignment
- [193] Mode Assignment
- [194] Schedule/Output Condition
- Item 14** [195] House Code & Unit Number
- [196] Miscellaneous options
- [197] Schedule Assignment
- [198] Mode Assignment
- [199] Schedule/Output Condition
- Item 15** [200] House Code & Unit Number
- [201] Miscellaneous options
- [202] Schedule Assignment
- [203] Mode Assignment
- [204] Schedule/Output Condition
- Item 16** [205] House Code & Unit Number
- [206] Miscellaneous options
- [207] Schedule Assignment
- [208] Mode Assignment
- [209] Schedule/Output Condition
- Item 17** [210] House Code & Unit Number
- [211] Miscellaneous options
- [212] Schedule Assignment
- [213] Mode Assignment
- [214] Schedule/Output Condition
- Item 18** [215] House Code & Unit Number
- [216] Miscellaneous options
- [217] Schedule Assignment
- [218] Mode Assignment
- [219] Schedule/Output Condition

- Item 19** [220] House Code & Unit Number
- [221] Miscellaneous options
- [222] Schedule Assignment
- [223] Mode Assignment
- [224] Schedule/Output Condition
- Item 20** [225] House Code & Unit Number
- [226] Miscellaneous options
- [227] Schedule Assignment
- [228] Mode Assignment
- [229] Schedule/Output Condition
- Item 21** [230] House Code & Unit Number
- [231] Miscellaneous options
- [232] Schedule Assignment
- [233] Mode Assignment
- [234] Schedule/Output Condition
- Item 22** [235] House Code & Unit Number
- [236] Miscellaneous options
- [237] Schedule Assignment
- [238] Mode Assignment
- [239] Schedule/Output Condition
- Item 23** [240] House Code & Unit Number
- [241] Miscellaneous options
- [242] Schedule Assignment
- [243] Mode Assignment
- [244] Schedule/Output Condition
- Item 24** [245] House Code & Unit Number
- [246] Miscellaneous options
- [247] Schedule Assignment
- [248] Mode Assignment
- [249] Schedule/Output Condition

Item 25

[250] House Code & Unit Number

[251] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[252] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[253] Mode Assignment

01

02

03

04

05

06

07

08

[254] Schedule/Output Condition

Item 26

[255] House Code & Unit Number

[256] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[257] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[258] Mode Assignment

01

02

03

04

05

06

07

08

[259] Schedule/Output Condition

Item 27

[260] House Code & Unit Number

[261] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[262] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[263] Mode Assignment

01

02

03

04

05

06

07

08

[264] Schedule/Output Condition

Item 28

[265] House Code & Unit Number

[266] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[267] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[268] Mode Assignment

01

02

03

04

05

06

07

08

[269] Schedule/Output Condition

Item 29

[270] House Code & Unit Number

[271] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[272] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[273] Mode Assignment

01

02

03

04

05

06

07

08

[274] Schedule/Output Condition

Item 30

[275] House Code & Unit Number

[276] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[277] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[278] Mode Assignment

01

02

03

04

05

06

07

08

[279] Schedule/Output Condition

- Item 31

[280] House Code & Unit Number

[281] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[282] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[283] Mode Assignment

01

02

03

04

05

06

07

08

[284] Schedule/Output Condition
- Item 32

[285] House Code & Unit Number

[286] Miscellaneous options

01

02

03

04

05

06

07

08

09

10

[287] Schedule Assignment

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

[288] Mode Assignment

01

02

03

04

05

06

07

08

[289] Schedule/Output Condition

Automation Item Zone Follower Assignments

- [290] Zone Follower Timer

Default

010

(Valid entries are 001-254 minutes; 255=infinite)

- [291] Zone Follower Items

NOTE: Automation Items will not follow momentary or maintained keyswitch zones or forced answer zones

Zones are divided into 2 banks; bank 1 = zones 1-16, bank 2 = zones 17-32. To assign an Automation item to follow a zone:

1. Enter section [291].
2. Enter the 2-digit Automation item number (01-32)
3. Enter a 1-digit bank number (1-2)
4. Enter a 2-digit option number corresponding to the zone you want the Automation item to follow (01-16).
(Option ON= follows Zone X; Option OFF= does not follow Zone X)
5. Record your programming on the next 2 pages.

Default: OFF

Bank [1] (Zones 1-16)

Option: 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16
(Zone): 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Item

[01]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[02]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[03]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[04]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[05]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[06]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[07]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[08]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[09]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[10]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[11]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[12]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[13]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[14]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[15]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[16]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[17]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[18]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[19]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[20]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[21]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[22]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[23]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[24]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[25]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[26]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[27]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[28]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[29]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[30]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[31]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[32]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Bank [2] (Zones 17-32)

Option:	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
(Zone):	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Item																
[01]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[02]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[03]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[04]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[05]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[06]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[07]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[08]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[09]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[10]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[11]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[12]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[13]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[14]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[15]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[16]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[17]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[18]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[19]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[20]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[21]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[22]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[23]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[24]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[25]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[26]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[27]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[28]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[29]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[30]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[31]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[32]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Assigning Modes to Follow PGM Outputs

[292] PGM Mode Enable

- To assign a mode to follow a PGM output:
1. Enter section [292].
 2. Enter the 2-digit number corresponding to the PGM output (01-14)
 3. Enter a 2-digit option number corresponding to the mode you want to follow the PGM output (01-08).

(Option ON= mode follows PGM output; Option OFF= mode does not follow PGM output)

Default = OFF

Mode: 01 02 03 04 05 06 07 08

PGM Output

[01]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[02]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[03]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[04]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[05]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[06]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[07]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[08]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[09]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[10]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[11]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[12]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[13]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
[14]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Automation Item Pulse Timers

Default: 005 (Valid entries are 000-255 seconds)

[301]	Automation Item 1: Pulse Timer	<input type="text"/>	[317]	Automation Item 17: Pulse Timer	<input type="text"/>
[302]	Automation Item 2: Pulse Timer	<input type="text"/>	[318]	Automation Item 18: Pulse Timer	<input type="text"/>
[303]	Automation Item 3: Pulse Timer	<input type="text"/>	[319]	Automation Item 19: Pulse Timer	<input type="text"/>
[304]	Automation Item 4: Pulse Timer	<input type="text"/>	[320]	Automation Item 20: Pulse Timer	<input type="text"/>
[305]	Automation Item 5: Pulse Timer	<input type="text"/>	[321]	Automation Item 21: Pulse Timer	<input type="text"/>
[306]	Automation Item 6: Pulse Timer	<input type="text"/>	[322]	Automation Item 22: Pulse Timer	<input type="text"/>
[307]	Automation Item 7: Pulse Timer	<input type="text"/>	[323]	Automation Item 23: Pulse Timer	<input type="text"/>
[308]	Automation Item 8: Pulse Timer	<input type="text"/>	[324]	Automation Item 24: Pulse Timer	<input type="text"/>
[309]	Automation Item 9: Pulse Timer	<input type="text"/>	[325]	Automation Item 25: Pulse Timer	<input type="text"/>
[310]	Automation Item 10: Pulse Timer	<input type="text"/>	[326]	Automation Item 26: Pulse Timer	<input type="text"/>
[311]	Automation Item 11: Pulse Timer	<input type="text"/>	[327]	Automation Item 27: Pulse Timer	<input type="text"/>
[312]	Automation Item 12: Pulse Timer	<input type="text"/>	[328]	Automation Item 28: Pulse Timer	<input type="text"/>
[313]	Automation Item 13: Pulse Timer	<input type="text"/>	[329]	Automation Item 29: Pulse Timer	<input type="text"/>
[314]	Automation Item 14: Pulse Timer	<input type="text"/>	[330]	Automation Item 30: Pulse Timer	<input type="text"/>
[315]	Automation Item 15: Pulse Timer	<input type="text"/>	[331]	Automation Item 31: Pulse Timer	<input type="text"/>
[316]	Automation Item 16: Pulse Timer	<input type="text"/>	[332]	Automation Item 32: Pulse Timer	<input type="text"/>

Automation Item Output Follower

 ***Up to 4 Automation items can be programmed to follow any one PGM output on the system.***

To program an Automation item to follow a PGM output:

1. Enter the section number corresponding to the Automation item (e.g. for Automation item 1, enter [401]).
2. Enter a 2-digit PGM number (01-14; 00= no PGM) to specify the PGM Output to be followed. Default=00

[401] Automation Item 1	<input type="text"/>	[417] Automation Item 17	<input type="text"/>
[402] Automation Item 2	<input type="text"/>	[418] Automation Item 18	<input type="text"/>
[403] Automation Item 3	<input type="text"/>	[419] Automation Item 19	<input type="text"/>
[404] Automation Item 4	<input type="text"/>	[420] Automation Item 20	<input type="text"/>
[405] Automation Item 5	<input type="text"/>	[421] Automation Item 21	<input type="text"/>
[406] Automation Item 6	<input type="text"/>	[422] Automation Item 22	<input type="text"/>
[407] Automation Item 7	<input type="text"/>	[423] Automation Item 23	<input type="text"/>
[408] Automation Item 8	<input type="text"/>	[424] Automation Item 24	<input type="text"/>
[409] Automation Item 9	<input type="text"/>	[425] Automation Item 25	<input type="text"/>
[410] Automation Item 10	<input type="text"/>	[426] Automation Item 26	<input type="text"/>
[411] Automation Item 11	<input type="text"/>	[427] Automation Item 27	<input type="text"/>
[412] Automation Item 12	<input type="text"/>	[428] Automation Item 28	<input type="text"/>
[413] Automation Item 13	<input type="text"/>	[429] Automation Item 29	<input type="text"/>
[414] Automation Item 14	<input type="text"/>	[430] Automation Item 30	<input type="text"/>
[415] Automation Item 15	<input type="text"/>	[431] Automation Item 31	<input type="text"/>
[416] Automation Item 16	<input type="text"/>	[432] Automation Item 32	<input type="text"/>

Label Programming *(Please see Appendix A for a list of available words.)*

! *Do not program a number command as the 6th word of a label. See section 3.4.*

Automation Item Labels								Default
[451]	Item 1	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 1
[452]	Item 2	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 2
[453]	Item 3	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 3
[454]	Item 4	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 4
[455]	Item 5	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 5
[456]	Item 6	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 6
[457]	Item 7	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 7
[458]	Item 8	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 8
[459]	Item 9	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 9
[460]	Item 10	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 10
[461]	Item 11	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 11
[462]	Item 12	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 12
[463]	Item 13	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 13
[464]	Item 14	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 14
[465]	Item 15	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 15
[466]	Item 16	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 16
[467]	Item 17	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 17
[468]	Item 18	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 18
[469]	Item 19	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 19
[470]	Item 20	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 20
[471]	Item 11	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 21
[472]	Item 22	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 22
[473]	Item 23	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 23
[474]	Item 24	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 24
[475]	Item 25	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 25
[476]	Item 26	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 26
[477]	Item 27	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 27
[478]	Item 28	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 28
[479]	Item 29	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 29
[480]	Item 30	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 30
[481]	Item 31	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 31
[482]	Item 32	Label	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	Item 32

Automation Mode Labels		Default
[521]	Mode 1 Label	Mode 1
[522]	Mode 2 Label	Mode 2
[523]	Mode 3 Label	Mode 3
[524]	Mode 4 Label	Mode 4
[525]	Mode 5 Label	Mode 5
[526]	Mode 6 Label	Mode 6
[527]	Mode 7 Label	Mode 7
[528]	Mode 8 Label	Mode 8
Miscellaneous System Labels		Default
[545]	Output Control 1	Output Control 1
[546]	Output Control 2	Output Control 2
[547]	Output Control 3	Output Control 3
[548]	Output Control 4	Output Control 4
System Partition Labels		Default
[561]	Partition 1 Label	System
[562]	Partition 2 Label	Partition 2
System Zone Labels		Default
[601]	Zone 1 Label	Zone 1
[602]	Zone 2 Label	Zone 2
[603]	Zone 3 Label	Zone 3
[604]	Zone 4 Label	Zone 4
[605]	Zone 5 Label	Zone 5
[606]	Zone 6 Label	Zone 6
[607]	Zone 7 Label	Zone 7
[608]	Zone 8 Label	Zone 8
[609]	Zone 9 Label	Zone 9
[610]	Zone 10 Label	Zone 10
[611]	Zone 11 Label	Zone 11
[612]	Zone 12 Label	Zone 12
[613]	Zone 13 Label	Zone 13

							Default
[614]	Zone 14 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 14
[615]	Zone 15 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 15
[616]	Zone 16 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 16
[617]	Zone 17 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 17
[618]	Zone 18 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 18
[619]	Zone 19 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 19
[620]	Zone 20 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 20
[621]	Zone 21 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 21
[622]	Zone 22 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 22
[623]	Zone 23 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 23
[624]	Zone 24 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 24
[625]	Zone 25 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 25
[626]	Zone 26 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 26
[627]	Zone 27 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 27
[628]	Zone 28 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 28
[629]	Zone 29 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 29
[630]	Zone 30 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 30
[631]	Zone 31 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 31
[632]	Zone 32 Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 32
[633]	Fire Alarm Label	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Fire Zone

Thermostat Control Programming

Sections 'e.g. [800]' to 'e.g. [804]' show the programming to be completed for each thermostat, using thermostat 1, Day occupancy setting as an example. Complete the programming for additional occupancy settings and thermostats in a similar manner. Record your programming in the sections that follow the example.

e.g. [800] Thermostat 1 Options

Default Option		ON	OFF
OFF	01	Thermostat 1 enrolled	Thermostat 1 not enrolled
OFF	02	Thermostat 1 EMS-OTS sensor connected	Thermostat 1 EMS-OTS not connected
ON	03	Thermostat 1 Heat enabled	Thermostat 1 Heat disabled
ON	04	Thermostat 1 Cool enabled	Thermostat 1 Cool disabled
OFF	05	Day Setting follows Sched./Output always	Day Set. follows Sched./Output only if mode ON
OFF	06	Night Setting follows Sched./Output always	Night Set. follows Sched./Output only if mode ON
OFF	07	Aux. Setting follows Sched./Output always	Aux. Set. follows Sched./Output only if mode ON
OFF	08	Away Setting follows Sched./Output always	Away Set. follows Sched./Output only if mode ON

e.g. [801] Thermostat 1 Day Occupancy Setting: Schedule Assignment

Default	Option	ON	OFF
OFF	<input type="checkbox"/> 01	Follows Schedule 1	Does not follow Schedule 1
OFF	<input type="checkbox"/> 02	Follows Schedule 2	Does not follow Schedule 2
OFF	<input type="checkbox"/> 03	Follows Schedule 3	Does not follow Schedule 3
OFF	<input type="checkbox"/> 04	Follows Schedule 4	Does not follow Schedule 4
OFF	<input type="checkbox"/> 05	Follows Schedule 5	Does not follow Schedule 5
OFF	<input type="checkbox"/> 06	Follows Schedule 6	Does not follow Schedule 6
OFF	<input type="checkbox"/> 07	Follows Schedule 7	Does not follow Schedule 7
OFF	<input type="checkbox"/> 08	Follows Schedule 8	Does not follow Schedule 8
OFF	<input type="checkbox"/> 09	Follows Schedule 9	Does not follow Schedule 9
OFF	<input type="checkbox"/> 10	Follows Schedule 10	Does not follow Schedule 10
OFF	<input type="checkbox"/> 11	Follows Schedule 11	Does not follow Schedule 11
OFF	<input type="checkbox"/> 12	Follows Schedule 12	Does not follow Schedule 12
OFF	<input type="checkbox"/> 13	Follows Schedule 13	Does not follow Schedule 13
OFF	<input type="checkbox"/> 14	Follows Schedule 14	Does not follow Schedule 14
OFF	<input type="checkbox"/> 15	Follows Schedule 15	Does not follow Schedule 15
OFF	<input type="checkbox"/> 16	Follows Schedule 16	Does not follow Schedule 16

e.g. [802] Thermostat 1 Day Occupancy Setting: Mode Assignment

Default	Option	ON	OFF
OFF	<input type="checkbox"/> 01	Assigned to Mode 1	Not assigned to Mode 1
OFF	<input type="checkbox"/> 02	Assigned to Mode 2	Not assigned to Mode 2
OFF	<input type="checkbox"/> 03	Assigned to Mode 3	Not assigned to Mode 3
OFF	<input type="checkbox"/> 04	Assigned to Mode 4	Not assigned to Mode 4
OFF	<input type="checkbox"/> 05	Assigned to Mode 5	Not assigned to Mode 5
OFF	<input type="checkbox"/> 06	Assigned to Mode 6	Not assigned to Mode 6
OFF	<input type="checkbox"/> 07	Assigned to Mode 7	Not assigned to Mode 7
OFF	<input type="checkbox"/> 08	Assigned to Mode 8	Not assigned to Mode 8

e.g. [803] Thermostat 1 Day Occupancy Setting: Schedule/PGM Output Condition

Default: 00 <input type="checkbox"/>		(Valid Entries are 00-04)	
[00]	No Schedule or PGM Output control	[03]	Schedule OR PGM Output
[01]	PGM Output control only	[04]	Schedule AND PGM Output
[02]	Schedule control only		

e.g. [804] Thermostat 1 Day Occupancy Setting: PGM Output Follower

Default: 00 ☐ (Valid entries are PGM Outputs 01-14; 00= not used)

Thermostat 1

[800]	Thermostat 1 Options	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
Day Oc. Set.	[801] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[802] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[803] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[804] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Night Oc.Set.	[806] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[807] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[808] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[809] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Aux. Oc.Set.	[811] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[812] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[813] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[814] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Away Oc.Set.	[816] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[817] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[818] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[819] PGM Output Follower	<u> </u> <u> </u> <u> </u>

Thermostat 2

[821]	Thermostat 2 Options	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
Day Oc.Set.	[822] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[823] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[824] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[825] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Night Oc.Set.	[827] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[828] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[829] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[830] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Aux. Oc.Set.	[832] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[833] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[834] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[835] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Away Oc.Set.	[837] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[838] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[839] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[840] PGM Output Follower	<u> </u> <u> </u> <u> </u>

Thermostat 3

[842]	Thermostat 3 Options	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
Day Oc.Set.	[843] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[844] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[845] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[846] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Night Oc.Set.	[848] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[849] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[850] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[851] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Aux. Oc.Set.	[853] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[854] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[855] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[856] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Away Oc.Set.	[858] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[859] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[860] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[861] PGM Output Follower	<u> </u> <u> </u> <u> </u>

Thermostat 4

[863]	Thermostat 4 Options	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
Day Oc.Set.	[864] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[865] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[866] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[867] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Night Oc.Set.	[869] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[870] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[871] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[872] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Aux. Oc.Set.	[874] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[875] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[876] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[877] PGM Output Follower	<u> </u> <u> </u> <u> </u>
Away Oc.Set.	[879] Schedule Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u>09</u> <u>10</u> <u>11</u> <u>12</u> <u>13</u> <u>14</u> <u>15</u> <u>16</u> <u> </u>
	[880] Mode Assignment	<u>01</u> <u>02</u> <u>03</u> <u>04</u> <u>05</u> <u>06</u> <u>07</u> <u>08</u> <u> </u>
	[881] Sched/Outpt Condition	<u> </u> <u> </u> <u> </u>
	[882] PGM Output Follower	<u> </u> <u> </u> <u> </u>

Thermostat Labels

		Default
[884]	Therm.1 Label	Thermostat 1
[885]	Therm.2 Label	Thermostat 2
[886]	Therm.3 Label	Thermostat 3
[887]	Therm.4 Label	Thermostat 4

Special Programming

[999] [Service Code] [999] Software Default VPM5580TC Programming
Re-enter VPM5580TC Service Code and Section Number [999].

Appendix A

V	P	M	5	5	8	0	T	C	L	A	B	E	L	L	I	B	R	A	R	Y
[000] Combined # Command	[048] Curtain	[099] Guest	[149] Nursery	[199] Sounder																
[001] Ordered # Command	[049] Dark	[100] Gun	[150] Office	[200] South																
[002] Individual # Command	[050] Day	[101] Gym	[151] Outer	[201] Sprinkler																
	[051] Deck	[102] Hallway	[152] Outlet	[202] Staff																
	[052] Degrees	[103] Heat	[153] Output *	[203] Stairs																
	[053] Den	[104] Heater	[154] Over	[204] Stereo																
[003] Access	[054] Detector	[105] High	[155] Overflow	[205] Stock																
[004] Air-conditioning	[055] Dining	[106] Holiday	[156] Overhead	[206] Storage																
[005] Alcove	[056] Dishwasher	[107] Home	[157] Panel	[207] Strike																
[006] And	[057] Door	[108] Hose	[158] Panic-button	[208] Sump																
[007] Apartment	[058] Down	[109] Hot tub	[159] Parking	[209] Supervision																
[008] Appliance	[059] Driveway	[110] House	[160] Partition *	[210] Swimming-pool																
[009] Area	[060] East	[111] Humidity	[161] Patio	[211] System *																
[010] Atrium	[061] Electric	[112] Interior	[162] Perimeter	[212] Tamper																
[011] Attic	[062] Elevator	[113] Intrusion	[163] Photocopier	[213] Television																
[012] Automatic	[063] Employee	[114] Item *	[164] Picture	[214] Temperature																
[013] Away	[064] Energy-save	[115] Jewellery	[165] Place	[215] Time																
[014] Back	[065] Entertainment	[116] Kitchen	[166] Play	[216] Tool																
[015] Backyard	[066] Entry	[117] Ladies'	[167] Porch	[217] Top																
[016] Balcony	[067] Equipment	[118] Lamp	[168] Portable	[218] Track																
[017] Bar	[068] Exercise	[119] Laundry	[169] Power	[219] Trap																
[018] Barn	[069] Exhaust	[120] Lawn	[170] Pressure	[220] Under																
[019] Basement	[070] Exit	[121] Left	[171] Proximity	[221] Unit																
[020] Bathroom	[071] Exterior	[122] Level	[172] Pull-station	[222] Up																
[021] Bay	[072] Extinguisher	[123] Library	[173] Pump	[223] Upper																
[022] Beam	[073] Factory	[124] Light	[174] Ramp	[224] Utility																
[023] Bedroom	[074] Family	[125] Lights	[175] Rear	[225] Vault																
[024] Blinds	[075] Fan	[126] Liquor	[176] Receiving	[226] Vent																
[025] Boat	[076] Fence	[127] Living	[177] Recreation	[227] Vibration																
[026] Boiler	[077] File	[128] Loading	[178] Refrigerator	[228] Walkway																
[027] Bottom	[078] Fire *	[129] Lobby	[179] Reset	[229] Warehouse																
[028] Boys	[079] Floor	[130] Lot	[180] Restricted	[230] Washroom																
[029] Building	[080] Florida	[131] Low	[181] Right	[231] Water																
[030] Cabinet	[081] Flow	[132] Lower	[182] Roof	[232] Weekend																
[031] Cafeteria	[082] Foil	[133] Machine	[183] Room	[233] Well																
[032] Camera	[083] Fountain	[134] Maids	[184] Safe	[234] West																
[033] Cash	[084] Foyer	[135] Mail	[185] Sauna	[235] Window																
[034] Ceiling	[085] Freezer	[136] Main	[186] Schedule	[236] Wine-cellar																
[035] Centre	[086] French	[137] Maintenance	[187] Sensor	[237] Work																
[036] Changeroom	[087] Front	[138] Master	[188] Service	[238] Yard																
[037] China	[088] Furnace	[139] Mat	[189] Shed	[239] Zone *																
[038] Circuit	[089] Game	[140] Medical	[190] Shipping	[240] Thermostat *																
[039] Classroom	[090] Garage	[141] Meeting	[191] Shop	[241] <i>Not Used</i>																
[040] Coffee-maker	[091] Garbage	[142] Men's	[192] Shutter	[242] <i>Not Used</i>																
[041] Cold	[092] Gas	[143] Middle	[193] Side	[243] <i>Not Used</i>																
[042] Collection	[093] Gate	[144] Mode *	[194] Silent	[244] <i>Not Used</i>																
[043] Compressor	[094] Girls	[145] Motion	[195] Skylight	[245] <i>Not Used</i>																
[044] Computer	[095] Glassbreak	[146] Night	[196] Sliding	[245] <i>(2 Second Pause)</i>																
[045] Contact	[096] Greenhouse	[147] North	[197] Smoke																	
[046] Control *	[097] Ground	[148] Number	[198] Solarium																	
[047] Crawl-space	[098] Guard																			

Appendix B

A U T O M A T I O N I T E M H O U S E C O D E S & U N I T N U M B E R S

<i>Enter</i>	<i>Code</i>	<i>Enter</i>	<i>Code</i>	<i>Enter</i>	<i>Code</i>	<i>Enter</i>	<i>Code</i>	<i>Enter</i>	<i>Code</i>
[000]	A 1	[052]	D 5	[103]	G 8	[154]	J 11	[205]	M 14
[001]	A 2	[053]	D 6	[104]	G 9	[155]	J 12	[206]	M 15
[002]	A 3	[054]	D 7	[105]	G 10	[156]	J 13	[207]	M 16
[003]	A 4	[055]	D 8	[106]	G 11	[157]	J 14	[208]	N 1
[004]	A 5	[056]	D 9	[107]	G 12	[158]	J 15	[209]	N 2
[005]	A 6	[057]	D 10	[108]	G 13	[159]	J 16	[210]	N 3
[006]	A 7	[058]	D 11	[109]	G 14	[160]	K 1	[211]	N 4
[007]	A 8	[059]	D 12	[110]	G 15	[161]	K 2	[212]	N 5
[008]	A 9	[060]	D 13	[111]	G 16	[162]	K 3	[213]	N 6
[009]	A 10	[061]	D 14	[112]	H 1	[163]	K 4	[214]	N 7
[010]	A 11	[062]	D 15	[113]	H 2	[164]	K 5	[215]	N 8
[011]	A 12	[063]	D 16	[114]	H 3	[165]	K 6	[216]	N 9
[012]	A 13	[064]	E 1	[115]	H 4	[166]	K 7	[217]	N 10
[013]	A 14	[065]	E 2	[116]	H 5	[167]	K 8	[218]	N 11
[014]	A 15	[066]	E 3	[117]	H 6	[168]	K 9	[219]	N 12
[015]	A 16	[067]	E 4	[118]	H 7	[169]	K 10	[220]	N 13
[016]	B 1	[068]	E 5	[119]	H 8	[170]	K 11	[221]	N 14
[017]	B 2	[069]	E 6	[120]	H 9	[171]	K 12	[222]	N 15
[018]	B 3	[070]	E 7	[121]	H 10	[172]	K 13	[223]	N 16
[019]	B 4	[071]	E 8	[122]	H 11	[173]	K 14	[224]	O 1
[020]	B 5	[072]	E 9	[123]	H 12	[174]	K 15	[225]	O 2
[021]	B 6	[073]	E 10	[124]	H 13	[175]	K 16	[226]	O 3
[022]	B 7	[074]	E 11	[125]	H 14	[176]	L 1	[227]	O 4
[023]	B 8	[075]	E 12	[126]	H 15	[177]	L 2	[228]	O 5
[024]	B 9	[076]	E 13	[127]	H 16	[178]	L 3	[229]	O 6
[025]	B 10	[077]	E 14	[128]	I 1	[179]	L 4	[230]	O 7
[026]	B 11	[078]	E 15	[129]	I 2	[180]	L 5	[231]	O 8
[027]	B 12	[079]	E 16	[130]	I 3	[181]	L 6	[232]	O 9
[028]	B 13	[080]	F 1	[131]	I 4	[182]	L 7	[233]	O 10
[029]	B 14	[081]	F 2	[132]	I 5	[183]	L 8	[234]	O 11
[030]	B 15	[082]	F 3	[133]	I 6	[184]	L 9	[235]	O 12
[031]	B 16	[083]	F 4	[134]	I 7	[185]	L 10	[236]	O 13
[032]	C 1	[084]	F 5	[135]	I 8	[186]	L 11	[237]	O 14
[033]	C 2	[085]	F 6	[136]	I 9	[187]	L 12	[238]	O 15
[034]	C 3	[086]	F 7	[137]	I 10	[188]	L 13	[239]	O 16
[035]	C 4	[087]	F 8	[138]	I 11	[189]	L 14	[240]	P 1
[036]	C 5	[088]	F 9	[139]	I 12	[190]	L 15	[241]	P 2
[037]	C 6	[089]	F 10	[140]	I 13	[191]	L 16	[242]	P 3
[038]	C 7	[090]	F 11	[141]	I 14	[192]	M 1	[243]	P 4
[039]	C 8	[091]	F 12	[142]	I 15	[193]	M 2	[244]	P 5
[040]	C 9	[092]	F 13	[143]	I 16	[194]	M 3	[245]	P 6
[041]	C 10	[093]	F 14	[144]	J 1	[195]	M 4	[246]	P 7
[042]	C 11	[094]	F 15	[145]	J 2	[196]	M 5	[247]	P 8
[043]	C 12	[095]	F 16	[146]	J 3	[197]	M 6	[248]	P 9
[044]	C 13	[096]	G 1	[147]	J 4	[198]	M 7	[249]	P 10
[045]	C 14	[097]	G 2	[148]	J 5	[199]	M 8	[250]	P 11
[046]	C 15	[098]	G 3	[149]	J 6	[200]	M 9	[251]	P 12
[047]	C 16	[099]	G 4	[150]	J 7	[201]	M 10	[252]	P 13
[048]	D 1	[100]	G 5	[151]	J 8	[202]	M 11	[253]	P 14
[049]	D 2	[101]	G 6	[152]	J 9	[203]	M 12	[254]	P 15
[050]	D 3	[102]	G 7	[153]	J 10	[204]	M 13	[255]	P 16
[051]	D 4								

Appendix C

A U T O M A T I O N M E N U C O M M A N D S

The following are commands available from the Home Automation menu. For more information on this menu, please see the VPM5580TC Instruction Manual.

Entering the Home Automation Menu

Press the Automation button to access the Home Automation menu. An access code may be required depending on programming in section [002]. If no access code is required, the VPM5580TC will immediately begin to announce the Home Automation menu. If an access code is required, it will prompt:

“Enter your Access Code.”

Enter your access code.

Home Automation Menu

The VPM5580TC announces:

“For Automation Control, press [1].”

“For Temperature Control, press [2].”

“For User Programming, press [3].”

“To exit, press [#].”

Automation Control Menu

From the Home Automation Menu, press [1], the VPM5580TC announces:

“For Individual Item Control, press [1].”

“For Mode Control, press [2]”

“For Global Item Control, press [3]”

“To exit, press [#].”

Please see the VPM5580TC Instruction Manual for a further description of this menu.

Temperature Control Menu

From the Home Automation Menu, press [2], the VPM5580TC announces:

“For Individual Thermostat Control, press [1].”

“For Mode Control, press [2]”

“To exit, press [#].”

Please see the VPM5580TC Instruction Manual for a further description of this menu.

User Programming Menus

Please see Appendix E for a description of this menu.

Appendix D

[★]

[6]

O

P

T

I

O

N

S

The following options are available in the [★][6] [Master User Code] User Functions menu.

Volume Control

When Volume Control is accessed the VPM5580TC will announce the following:

“Volume is {High/Medium/Low}.

To change Volume, press [1].

To exit, press [#].”

Speech Rate

When the Speech Rate is accessed the VPM5580TC will announce the following:

“Speech Rate is {Slow/Fast}.

To change Speech Rate, press [1].

To exit, press [#].”

Appendix E

A C C E S S C O D E P R O G R A M M I N G

The Access Code Programming function allows you to program access codes that will function on the security system as well as on the VPM5580TC. The system can be set to accept 4 or 6 digit user codes. Depending on what model of security system you have, you may have the ability to program either 6 or 37 access codes. To program these user codes, follow these steps:

1. With the system disarmed, access the security system using the steps described in the Accessing Your Security System and Accessing Partitions section of this manual.
2. Press [*]. When the system announces:

“For User Code Programming, press [5].”

press [5]. The system will then announce:

“Enter Your Master Code:”

3. Enter your master access code. The system will then announce:

“User Code Programming Enter the one-/two- digit user number.

For User Option Programming, press [9].

User X, Y and Z are programmed. To exit, press [#].”



Your system may or may not prompt you with “User Option Programming”. Please consult your security system instruction manual for more information on user options.

4. Enter the number of the access code that you wish to program at this time. The system will announce:

“Enter the new 4-/6- digit access code.

To exit, press [#].”

5. Enter the new code at this point. You will again be prompted by the message:

“User Code Programming Enter the one-/two- digit user number.

For User Option Programming, press [9].

Users X, Y and Z are programmed. To exit, press [#].”

6. If you wish to program another access code, enter the user number. If not, press [#] to return to the main menu.

Appendix F

G	L	O	S	S	A	R	Y
---	---	---	---	---	---	---	---

Access Code

A 4- or 6-digit code that allows users to access arming, disarming and other system functions. Different access codes may be assigned to different users.

Automation Item

Automation Items are devices (e.g. lights, appliances, etc.) connected to X-10 modules and controlled within the Home Automation feature of the VPM5580TC system. Automation items can be controlled manually, or with schedules and/or PGM outputs.

Command Output / Output Control

You can program any programmable output (PGM output) on the system to work as a Command Output (1-4). See your control panel Installation Manual for more information. Users can activate Command Outputs by entering [*][7][1-4] at any keypad, or through the VPM5580TC.

When you assign items, occupancy settings or modes to PGM outputs programmed as Command Outputs, users can enter [*][7][1-4] to turn the items, occupancy settings, or modes on or off.

You can program a label for each Command Output (Output Control labels). See section 3.4, "Programming Label Entry Sections".

Mode

Modes give users control over groups of Automation items or thermostat occupancy settings programmed for scheduled, or event-initiated operation. Users can turn a mode on or off to activate/deactivate the items/thermostat settings assigned to it. When a mode is turned on, each of these items/thermostat settings will operate according to their assigned schedule(s) / PGM outputs.

Occupancy Setting

Each thermostat has four different temperature ranges that can be programmed. These temperature ranges are called Occupancy Settings:

- Day Occupancy Setting
- Night Occupancy Setting
- Auxiliary Occupancy Setting
- Away Occupancy Setting.

These occupancy settings allow users to easily change the temperature range for the area controlled by the thermostat. Depending on which Thermostat Mode is turned on, the thermostat will use either heating or cooling devices to maintain the temperature within the range programmed for the occupancy setting.

Partition

A group of zones on the system which are armed/disarmed and controlled independently of other zones grouped into a separate partition. Each partition has its own keypad and can be assigned its own access codes.

Thermostat Mode

Each thermostat has 4 different Thermostat Modes:

- Cool
- Heat
- Automatic
- Off

If the thermostat is connected to a cooling device (e.g. air conditioning), use the Cool mode to maintain the temperature below a certain level. If the thermostat is connected to a heating device (e.g. furnace), use the Heat mode to maintain the temperature above a certain level. If the thermostat is connected to both a cooling device and a heating device, use the Automatic mode to maintain the temperature within a certain range with both the heating and cooling devices. You can stop temperature control by selecting the Off mode.

Users can change thermostat modes using the VPM5580TC, the thermostat, or a system keypad.

Zone

An area (e.g. a room) or barrier (e.g. a door) within the premises that is monitored by a detector (e.g. smoke detector, door/window contact, motion detector, glassbreak detector, etc.).

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC Rules. On the side of this equipment is a label that contains, among other information, the FCC registration number of this equipment.

NOTIFICATION TO TELEPHONE COMPANY Upon request, the customer shall notify the telephone company of the particular line to which the connection will be made, and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC Registration Number: F53CAN-24626-MF-E

AC REN: 1.4B DC REN: 1.2 Service Order Code: 9.0F

USOC Jack: RJ11C Authorized Network Ports: 02LS2

TELEPHONE CONNECTION REQUIREMENTS Except for the telephone company provided ringers, all connections to the telephone network shall be made through standard plugs and telephone company provided jacks, or equivalent, in such a manner as to allow for easy, immediate disconnection of the terminal equipment. Standard jacks shall be so arranged that, if the plug connected thereto is withdrawn, no interference to the operation of the equipment at the customer's premises which remains connected to the telephone network shall occur by reason of such withdrawal.

INCIDENCE OF HARM Should terminal equipment or protective circuitry cause harm to the telephone network, the telephone company shall, where practicable, notify the customer that temporary disconnection of service may be required; however, where prior notice is not practicable, the telephone company may temporarily discontinue service if such action is deemed reasonable in the circumstances. In the case of such temporary discontinuance, the telephone company shall promptly notify the customer and will be given the opportunity to correct the situation.

ADDITIONAL TELEPHONE COMPANY INFORMATION The security control panel must be properly connected to the telephone line with a USOC RJ-31X telephone jack.

The FCC prohibits customer-provided terminal equipment be connected to party lines or to be used in conjunction with coin telephone service. Interconnect rules may vary from state to state.

CHANGES IN TELEPHONE COMPANY EQUIPMENT OR FACILITIES The telephone company may make changes in its communications facilities, equipment, operations or procedures, where such actions are reasonably required and proper in its business. Should any such changes render the customer's terminal equipment incompatible with the telephone company facilities the customer shall be given adequate notice to the effect modifications to maintain uninterrupted service.

RINGER EQUIVALENCE NUMBER (REN) The REN is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company.

EQUIPMENT MAINTENANCE FACILITY If you experience trouble with this telephone equipment, please contact the facility indicated below for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Digital Security Controls Ltd. 160 Washburn St., Lockport, NY 14094

LIMITED WARRANTY

Digital Security Controls Ltd. warrants the original purchaser that for a period of twelve months from the date of purchase, the product shall be free of defects in materials and workmanship under normal use. During the warranty period, Digital Security Controls Ltd. shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labour and materials. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original owner must promptly notify Digital Security Controls Ltd. in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, with the exception that Digital Security Controls Ltd. shall not be responsible for any customs fees, taxes, or VAT that may be due.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to Digital Security Controls Ltd. must first obtain an authorization number. Digital Security Controls Ltd. will not accept any shipment whatsoever for which prior authorization has not been obtained.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of Digital Security Controls Ltd. such as excessive voltage, mechanical shock or water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by Digital Security Controls Ltd.);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Digital Security Controls Ltd.'s liability for failure to repair the

product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty. Under no circumstances shall Digital Security Controls Ltd. be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) And of all other obligations or liabilities on the part of Digital Security Controls Ltd. Digital Security Controls Ltd. neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

WARNING: Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

Installer's Lockout

Any products returned to DSC which have the Installer's Lockout option enabled and exhibit no other problems will be subject to a service charge.

Out of Warranty Repairs

Digital Security Controls Ltd. will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to Digital Security Controls Ltd. must first obtain an authorization number. Digital Security Controls Ltd. will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which Digital Security Controls Ltd. determines to be repairable will be repaired and returned. A set fee which Digital Security Controls Ltd. has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which Digital Security Controls Ltd. determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.



©1999 Digital Security Controls Ltd.
Toronto, Canada
1-800-387-3630 • www.dscgrp.com
Printed in Canada 29004456 R002

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. Industry Canada does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

User should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

AC REN=1.4B DC REN =1.2

AVIS: L'étiquette de l'Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Industrie Canada n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêchent pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, les lignes téléphoniques et les canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

AVERTISSEMENT: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif terminal indique, pour éviter toute surcharge, le pourcentage de la charge totale qui peut être raccordée à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

AC REN=1.4B DC REN =1.2