



EKT-Deskstand Installation Instructions

The EKT-Deskstand positions EKT-824 telephones at a comfortable viewing angle, and comes with a pullout drawer, and a Telephone Directory/Quick Reference Guide booklet for the drawer. The Quick Reference Guide gives you instant access to the most commonly used features of the Communiqué system.

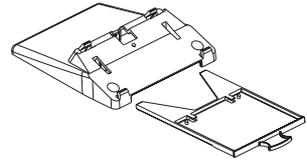

To install the EKT-Deskstand on the EKT-824 telephone:

1. Remove the pullout drawer from the Deskstand by sliding it all the way out.
2. Turn the EKT-824 telephone over, so that the bottom of the telephone is facing you.
3. Turn the Deskstand over. Thread the telephone cord through Hole **1**, from the front into the back of the Deskstand
4. Plug the cord into the back of the telephone, then secure the cord under strain relief **2**.
5. Align tabs **A** and **B** on the Deskstand with the slots on the bottom of the telephone. Press the tabs into the slots.

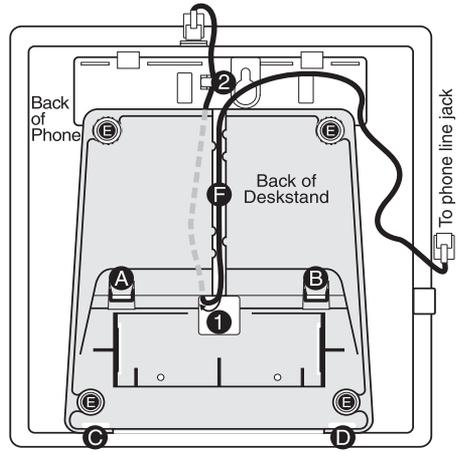

6. Press down on the Deskstand so that tabs **C** and **D** lock into their slots on the bottom of the telephone.

Note: If the bottom of the telephone does not have slots at **C** and **D**, carefully cut off the tabs on the deskstand. Clean the bottom of the telephone and the deskstand between areas **C** and **D** with an alcohol wipe and dry the areas. Use a piece of double-sided foam tape to secure the deskstand to the telephone.

7. Peel the backing off the supplied Deskstand feet (shown as **E**) and stick them to the bottom of the Deskstand.
8. Press the telephone cable into the groove **F** on the back of the Deskstand.
9. Slide the pullout drawer back into place. If you have trouble sliding the drawer in, gently squeeze the sides of the drawer with your fingers.
10. Turn the telephone over.
11. Slide the Telephone Directory/Quick Reference Guide booklet into the drawer. Press the holes in the booklet onto the drawer posts.



COMMUNIQUÉ™

© 1999 Digital Security Controls Ltd.

Toronto • Canada • 1-800-387-3630 • www.dscgrp.com

Printed in Canada

29004936 R001