

TM2 Telecom Interface Module

Installation Instructions

• W A R N I N G •

Please refer to the **System Installation Manual** for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

The TM2 will connect the telecom network to the panel's telecom circuit, through an Escort5580 or PC5928 module, with a FCC-68-regulation plug.

Installation


Attach the TM2 to the inside or bottom of the panel's cabinet with the provided double-sided tape.

OR

Drill a 3/16" hole in the cabinet and attach the TM2 using a 1/4" plastic standoff.

Wiring

Connect the TM2 as shown below:

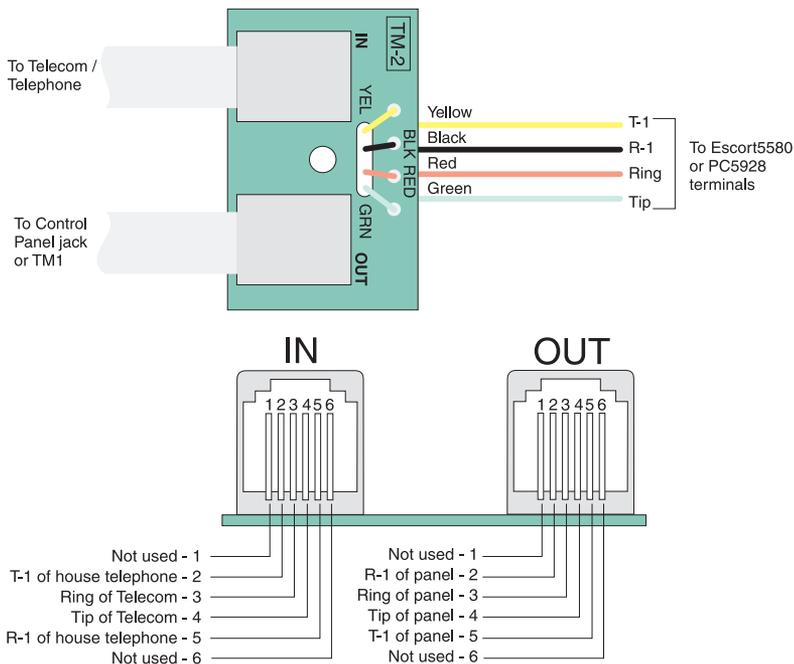

If a TM1 module is connected to the control panel, use a "straight through" patch cord between the TM2 "out" jack and the TM1. Please see the TM1 instruction sheet for a description of TM1 wiring.