

LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defect in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

WARNING: Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Products Ltd. could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

Digital Security Products Ltd. 160 Washburn St., Lockport, NY 14094



©1999 Digital Security Controls Ltd.

Toronto, Canada

1-800-387-3630 • www.dscgrp.com

Printed in Canada 29002325 R004




Dual Analog Interface Unit Installation Instructions


The Communiqué Dual Analog Interface (DAI) unit acts as an interface between the digital telephone system and two analog telephone devices, such as fax machines, computer modems and cordless or standard analog telephone sets. This device will save having to install a separate telephone line for each device. Up to eight DAI units can be installed per system, for a total of 16 analog stations.

Mounting and Connecting the DAI unit

1. Locate the area to which the DAI unit will be mounted. Fasten the two mounting screws to the wall, making sure that they are the same distance apart as the mounting holes on the back of the unit.
2. Place the DAI unit over the screws and then press it down towards the floor to secure it into place (see diagram below).

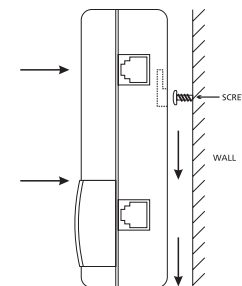

3. Once the DAI unit is mounted to the wall, the telephone connections can be made. Using 4-conductor swapped cable with RJ-12 plugs on each end, run a swapped cable from the Station In to a station jack on the control unit. Run two other cables from the Station A and B Out jacks to two separate analog telephone devices (see diagram below).

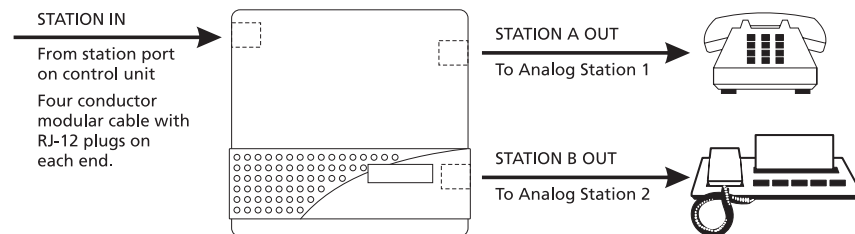

DAI units can only be connected to Stations 10-17 on the Communiqué control unit.

DAI Unit Programming

Each DAI unit can be connected to two analog devices occupying two separate stations. The first device will belong to the station to which the interface unit is connected to; the second device will be assigned to a station programmed in this section.

The second device can be assigned to any empty station from 18-33. The DAI units, however, can only be connected to stations 10-17. We therefore recommend that the second devices be assigned to stations 18-33 so as to leave other stations free for any interface units required.

To program the second analog station, enter installer's programming by pressing the PGM key three times. Press the Line 4 key. The display will read...

```
DAI Second  
Station
```

Press the flashing Line 4 key again. The display will read...

```
Select a DAI  
Station
```

Station keys 10 through 17 will turn ON. If DAI units are connected to one or more of stations 10-17, the corresponding Station key will be flashing quickly.

To view the programming status of the first eight stations, press each of the lit Station keys one at a time. If the Station 10 key is pressed, the key will flash slowly and the display will read...

```
Station 10  
2nd Station = NONE
```


To program the second station for station 10, press the Station 10 key again. The display will read...

```
Assign a Second  
Station, # = NONE
```

All stations that are available to be used as a second station will turn ON. A Station key that is not lit represents a station that is already in use and may not be assigned as a second station. To select the second station, press the corresponding Station key (for example, Station 33). The key will begin to flash quickly and the display will read...


```
Station 10  
2nd Station = 33
```

Press the PGM key to save the new setting. The display will return to the "Select a DAI Station" prompt.

 ***If a modem or fax machine is connected to a DAI station, the "Receive Door Bell" feature must be turned off for the corresponding station (see "Speaker Control" in the Communiqué Operation Manual for details).***

Fax Station Programming

Additional programming is required when connecting fax machines to the Communiqué system. When an incoming fax call is answered by the message center, the fax tones are detected and the call is automatically routed to the fax station.

 ***Only one fax machine can receive faxes per system via the automatic routing feature.***

To program a station for a fax machine, enter installer's programming by pressing the PGM key three times. Press the Station 12 key. The display will read...

```
Program Fax  
Station
```

Press the Station 12 key again. The display will read...

```
Fax Station  
Station XX
```

...if a fax station has been programmed or

```
Fax Station  
Not Enabled
```

...if there is no fax station.

All Station keys corresponding to stations which are connected to DAI units will be either lit solid or flashing. If these units have a second station programmed, those Station keys will also be either lit solid or flashing. If the Station key is flashing, the station is programmed as a fax station; if the key is lit solid, the station is not programmed as a fax station.

Fax stations must be programmed one at a time. To program a fax station, press the corresponding lit Station key. The key will start flashing quickly and the display will read...

```
Fax Station  
Station XX
```

To disable the fax station feature at a station, press the corresponding flashing Station key. The key will be lit solid and the display will read...

```
Fax Station  
Not Enabled
```

To save any programming changes, press the PGM key.



A fax station must be programmed to have "Access Only" for all system lines (see "Line Ringing and Access" in the Communiqué Installation Manual for details).

Ringing Cadence Programming:

Each DAI Unit can be programmed to ring with different cadences. This is done by programming the "ON Time" of the ringing cycle for each analog station.

To program the ringing cadence, enter Installer's programming by pressing the PGM key three times. Press the Line 2 key twice. Press the Station 25 key. The display will read...

```
DAI Station  
Ring Cadence
```

Press the Station 25 key again. The display will read...

```
Select a DAI  
Station
```

Select the DAI station to be programmed by pressing the corresponding lit station key. Station keys 10 through 13 will turn ON, each key representing a different "ON Time". Press the lit station keys until the desired "ON Time" appears on the display...

```
Station 10  
ON Time 1.5s
```

Press the PGM key to save the entry.