


# PC5400

## Printer Module v2.2TAFNZ

INSTALLATION INSTRUCTIONS

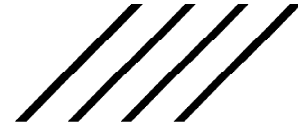

### Introduction

#### Features

Allows compatible control panels to be connected to a local serial printer.

#### Module Specifications

- 4-wire (QUAD) hook-up to keybus
- Normal current draw of 35mA
- Tamper and Trouble reporting codes
- Maximum cable length: 200 feet (61 meters)

#### *PC5400 connected to a serial printer*

- True RS-232 technology
- DTR protocol
- Four baud rates: 300, 1200, 2400 or 4800

#### Compatible Products

- PC5015
- PC5010
- PC5008
- PC1580
- PC1565
- PC585

### Installation

#### Mounting the Cabinet

When mounting a new cabinet for the PC5400, select a dry location close to where the serial printer will be located.

To mount the PC5400:

1. Press the four white circuit board stand-offs into the raised mounting holes from the back of the cabinet.
2. Hold the cabinet in position and pull the wires into the cabinet.
3. Mount the cabinet securely to the wall using the mounting screws provided. Use the appropriate wall anchors when securing the panel to the drywall, plaster, concrete, brick or other similar surfaces.
4. With the cabinet mounted press the PC5400 module into the stand-offs.

#### Wiring

Refer to the Hook-up Diagram included in this manual.

#### *RED, BLK, YEL and GRN Terminals*

Connect the RED, BLK, YEL and GRN terminals to the RED, BLK, YEL and GRN terminals on the control panel. Refer to the control panel Installation Manual for complete instructions on keybus wiring.


#### *T1 and T2*

Connect T1 and T2 to a normally closed switch that will be used to monitor tampers. If no tamper switch is desired place a wire between T1 and T2.

### • WARNING •

Please refer to the System Installation Manual for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

PC5400 Hookup Diagram

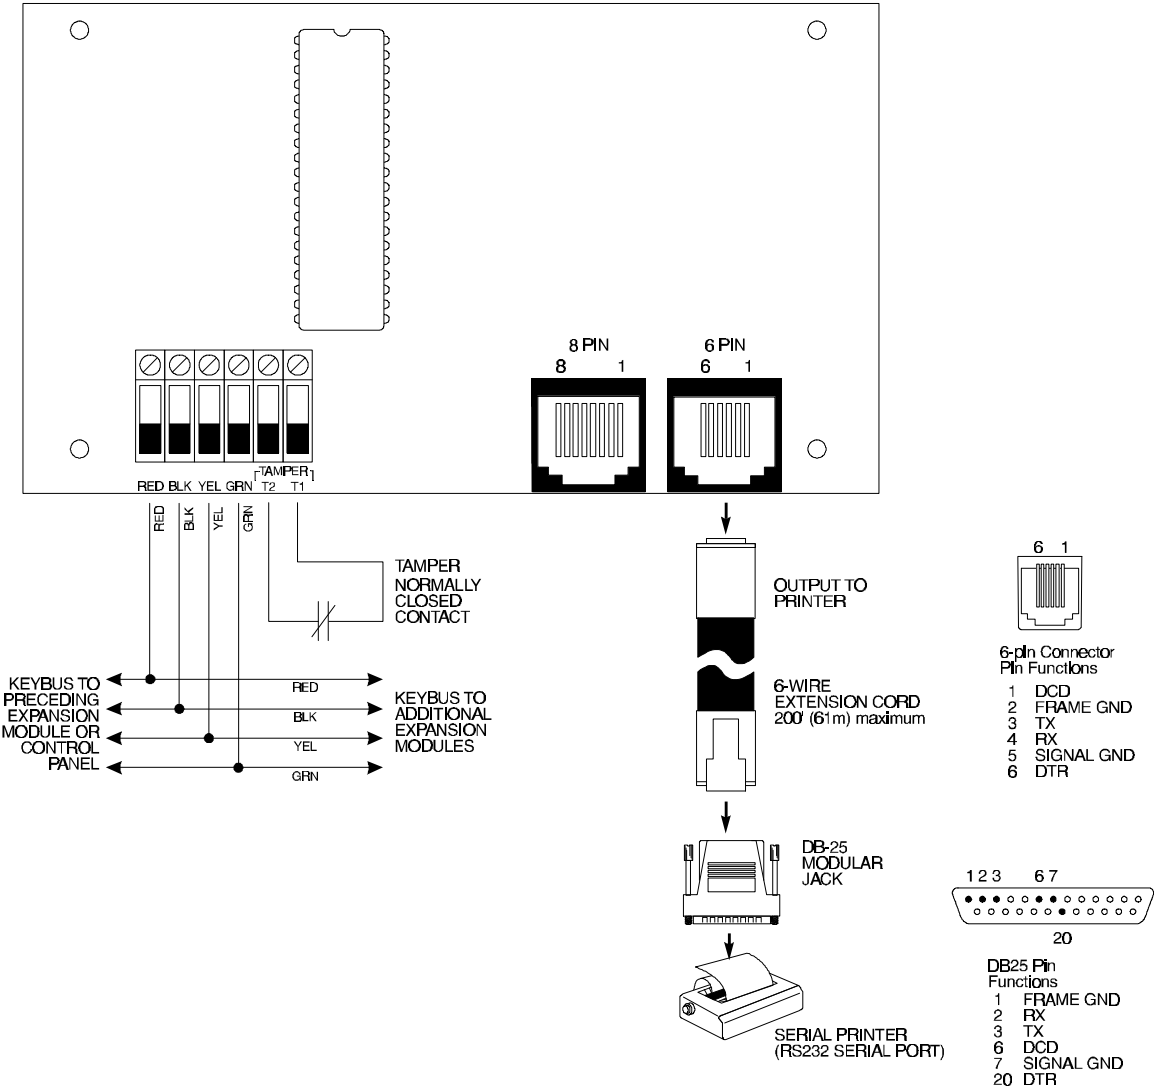

**PC5400 Programming**

If you will be connecting the PC5400 to a PC5010, PC5015, PC5008, PC1565 or PC585 control panel, access the PC5400 programming sections at a system keypad by entering [\*][8][Installer's Code][801]. Then enter the 2-digit number of the section you want to program.

If you will be connecting the PC5400 to a PC1580, access the PC5400 programming sections at a system keypad by entering [\*][8][Installer's Code][87]. Then enter the 2-digit number of the section you want to program.

**Section [01], Option [1] ..... Printer Enable/Disable**

Enables the module for use with a serial printer.

**Section [01], Option [2] ..... Handshake Enable/Disable**

Enables a handshake with the printer.

**Section [01], Option [3] ..... Printer Columns**

Program the number of columns appropriate for the printer.

**Section [01], Options [4] to [7] .. Baud Rate**

Program the baud rate the PC5400 module will use to communicate with the serial printer. The baud rate is the speed at which information will be transmitted from the PC5400 module to the serial printer. There are four different baud rates available. If you are experiencing problems with missing characters, try lowering the baud rate.

**Section [01], Option [8] ..... Clock display**

Program how the clock displays the time.

**Section [05] ..... Printer Language Selection**

The default language is English. You can program the module for French, Spanish or Swedish.

**NOTE: If some characters do not print correctly, try changing the character set your printer uses.**

**[01] Printer Configuration**

Default	Option	Option ON	Option OFF
OFF <input type="checkbox"/>	<b>1</b>	Printer Enabled	Printer Disabled
ON <input type="checkbox"/>	<b>2</b>	Handshake from Printer (DTR)	No Handshake
OFF <input type="checkbox"/>	<b>3</b>	80 Column Printer	40 Column Printer
OFF <input type="checkbox"/>	<b>4</b>	300 Baud enabled	300 Baud disabled
OFF <input type="checkbox"/>	<b>5</b>	1200 Baud enabled	1200 Baud disabled
ON <input type="checkbox"/>	<b>6</b>	2400 Baud enabled	2400 Baud disabled
OFF <input type="checkbox"/>	<b>7</b>	4800 Baud enabled	4800 Baud disabled
OFF <input type="checkbox"/>	<b>8</b>	Local clock displays 24hr time	Local clock displays AM/PM

**[05] Language Selection**

Default

01    ☐☐    Printer Language

01 .....	English
02 .....	French
03 .....	Spanish
04 .....	Swedish

## LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defect in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

**WARNING:** Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

## FCC COMPLIANCE STATEMENT

**CAUTION:** Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment generates and uses radio frequency energy and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for Class B device in accordance with the specifications in Subpart "B" of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in any residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to television or radio reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna
- Relocate the alarm control with respect to the receiver
- Move the alarm control away from the receiver
- Connect the alarm control into a different outlet so that alarm control and receiver are on different circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.



© 1998 Digital Security Controls Ltd.  
1645 Flint Road, Downsview, Ontario, Canada M3J 2J6  
(416) 665-8460  
29003180 R0 Printed in Canada